 


BAYARD

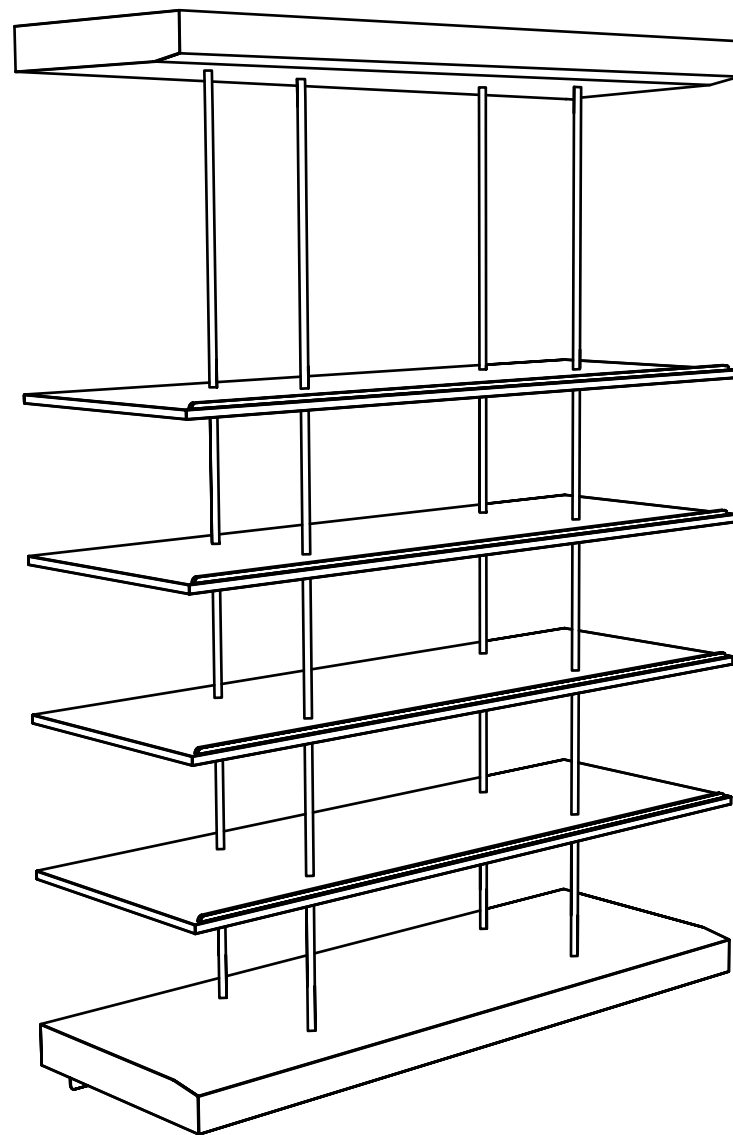 


MODLOFT



ASSEMBLY INSTRUCTION BAYARD MD103


PARTS

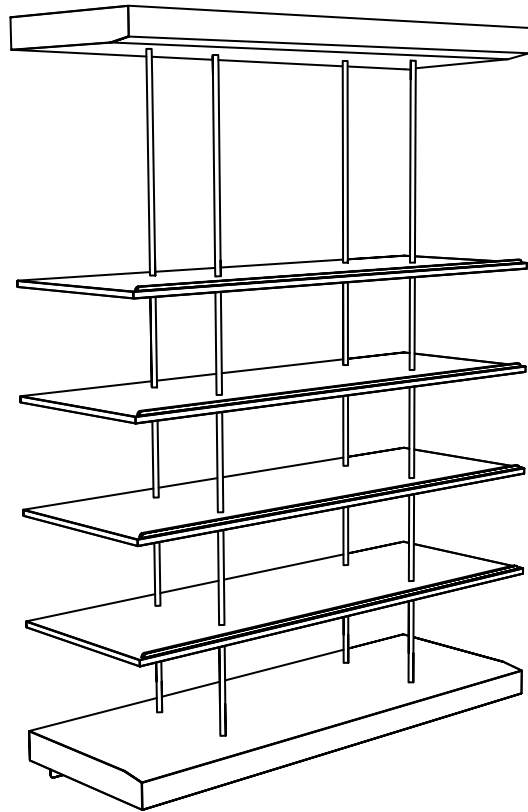

① x 1



 ② x 16




③ x 4



④ x 4



 ⑤ x 1

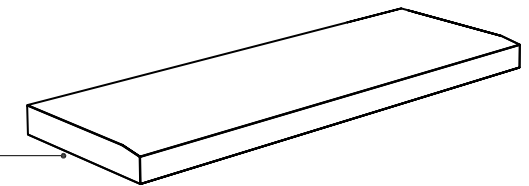

HARDWARE



M6x15mm

Ⓐ x 8



M5x60mm

Ⓑ x 8



M6x25mm

Ⓒ x 3



M5x40mm

Ⓓ x 16



 
φ13xφ6x1

Ⓔ x 11



φ11xφ5x1


Ⓕ x 48



M6x60mm

Ⓖ x 12

 TOOL

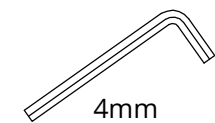


4mm

Ⓗ x 1



ASSEMBLY INSTRUCTION

 
BAYARD MD103

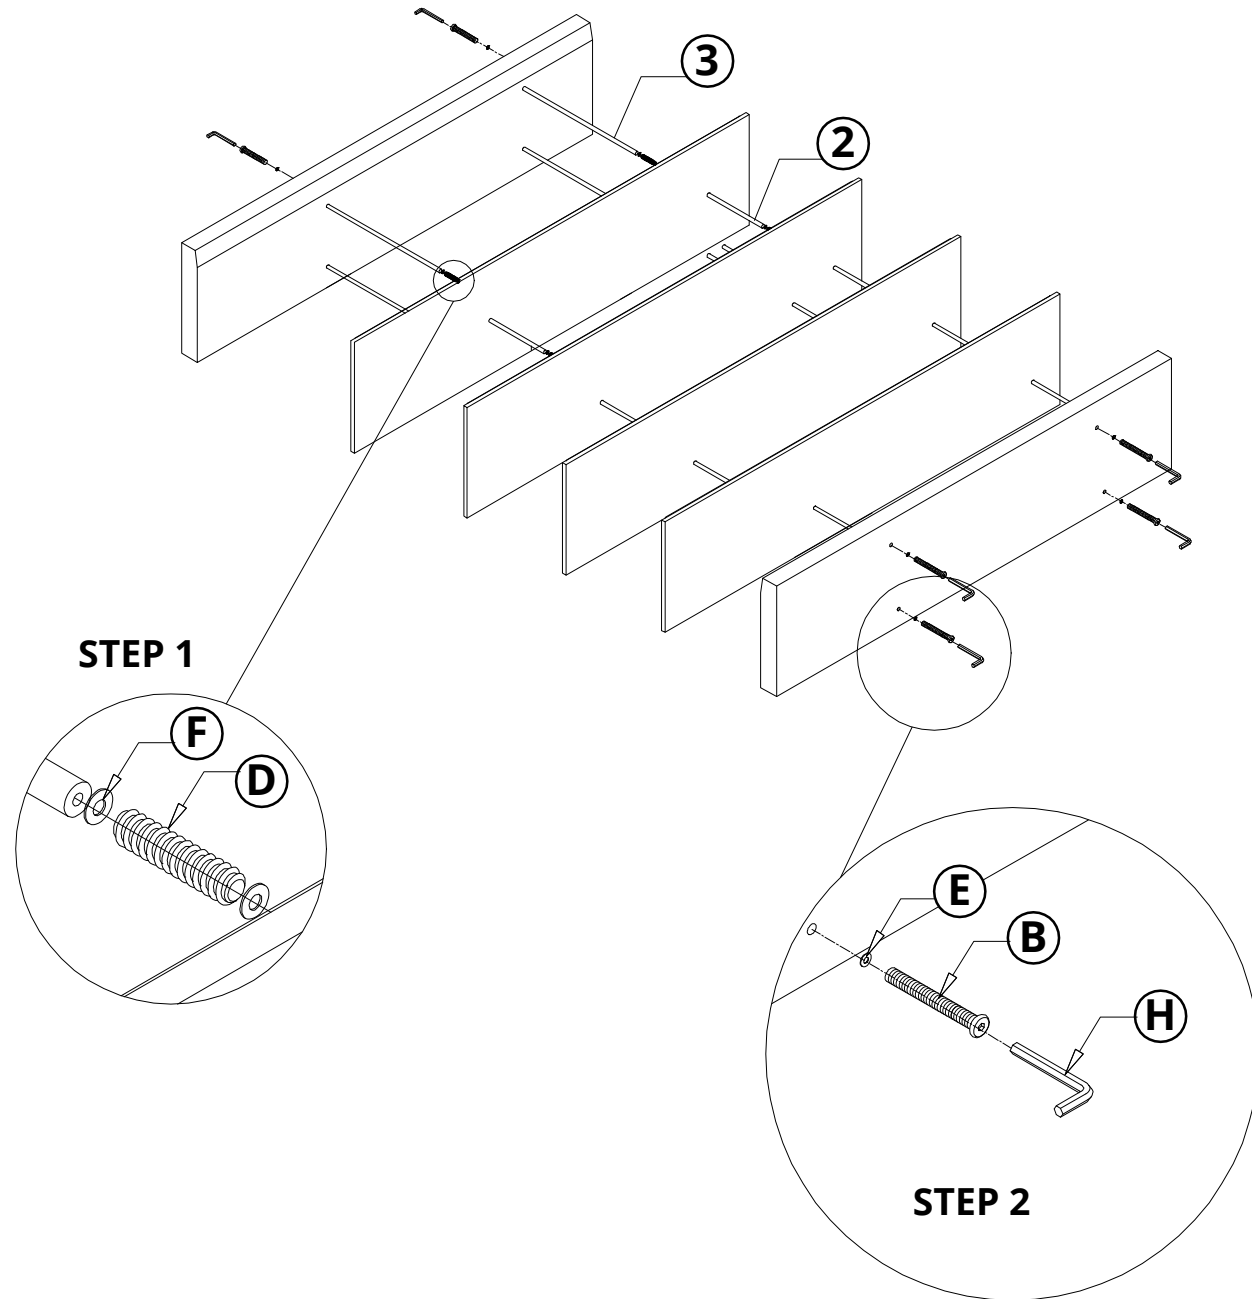




ASSEMBLY INSTRUCTION

 BAYARD MD103

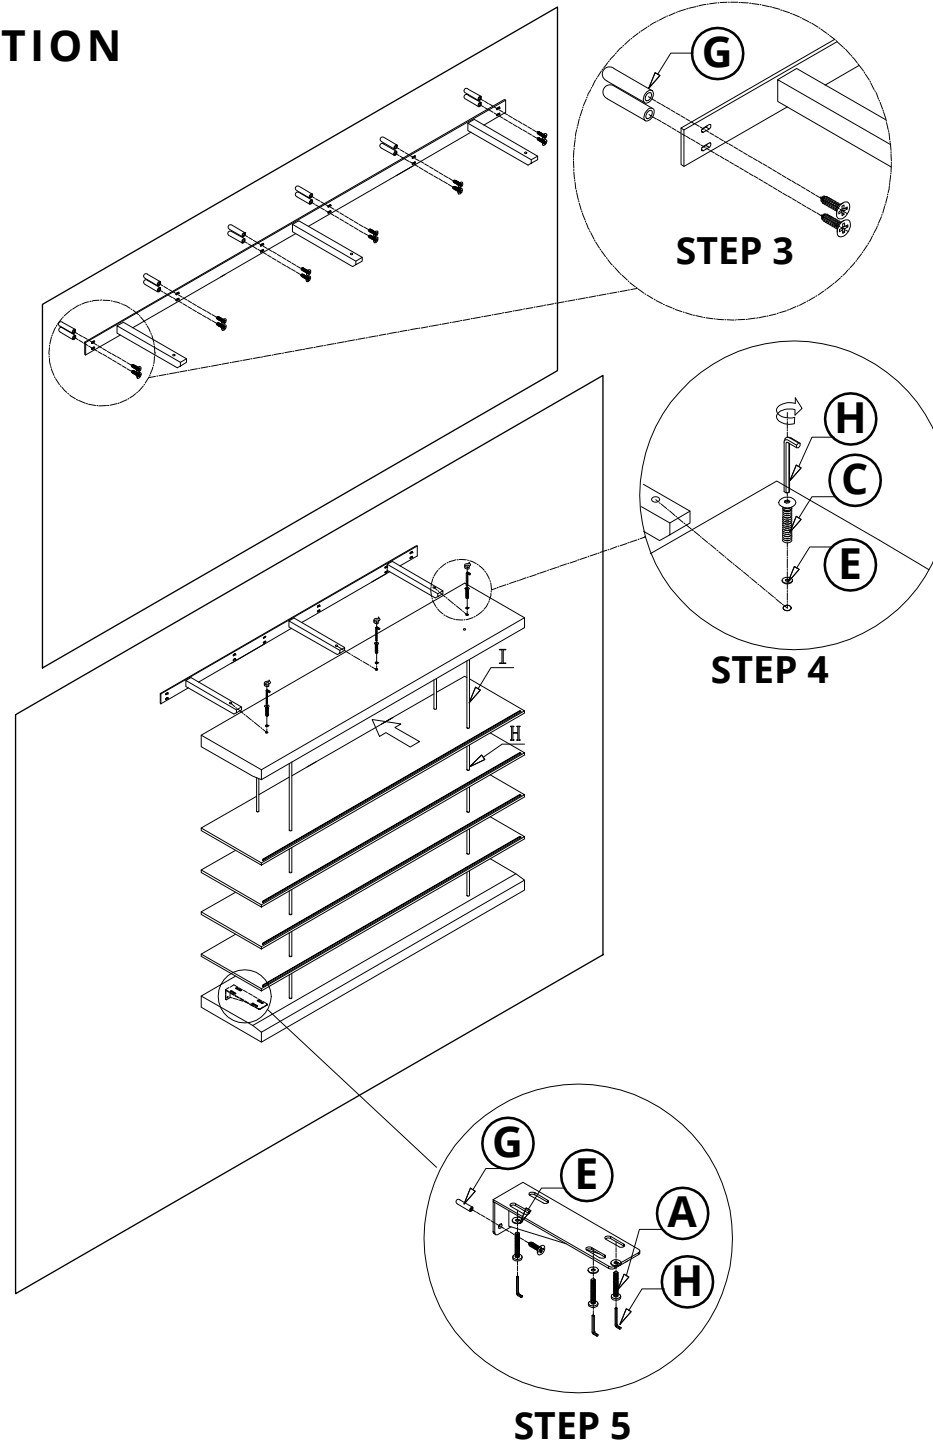

STEP 5

 BAYARD

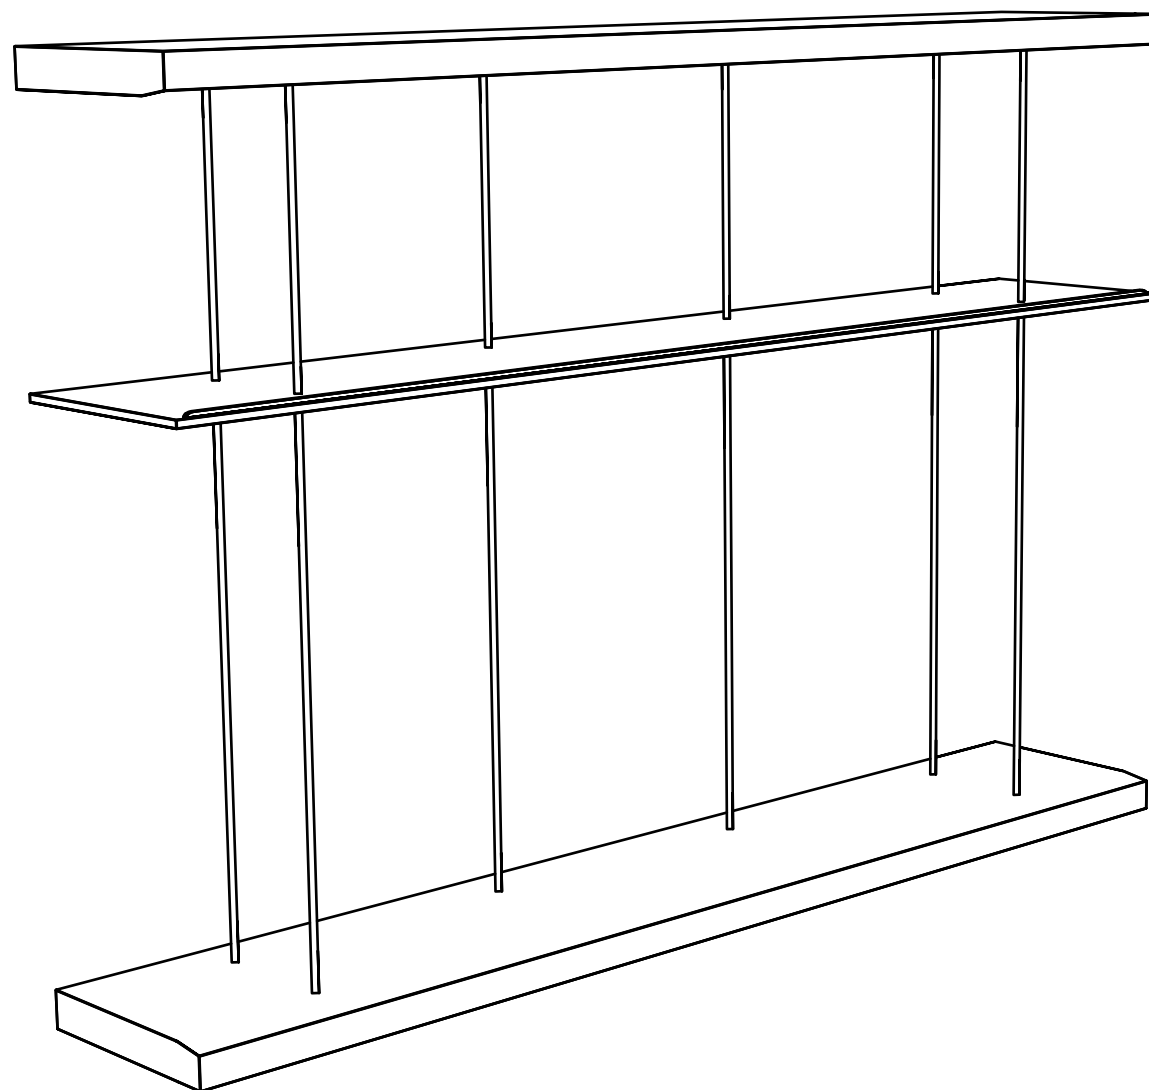


MODLOFT




ASSEMBLY INSTRUCTION

BAYARD MD104

 
PARTS

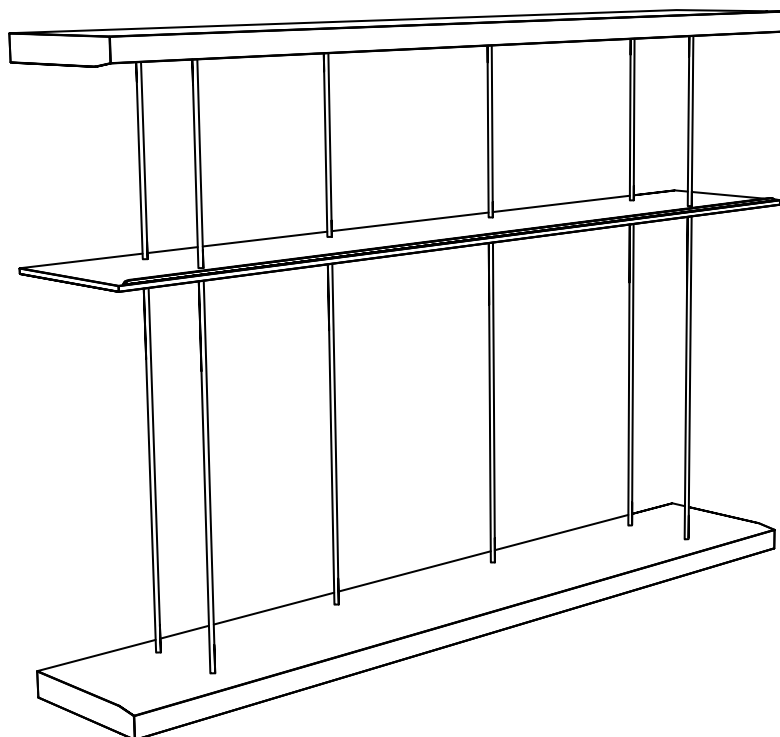

① x 1

 

② x 6

 


③ x 6



④ x 1



 ⑤ x 1

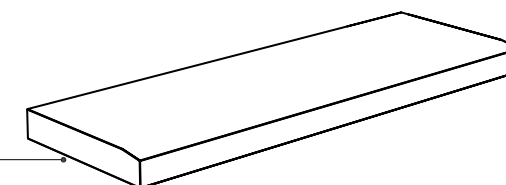

HARDWARE



M6x15mm

Ⓐ x 17



M5x60mm

Ⓑ x 12



M5x40mm

Ⓓ x 6



 
φ13xφ6x1

Ⓔ x 17



φ11xφ5x1


Ⓕ x 36



M6x60mm

Ⓖ x 18

 
TOOL

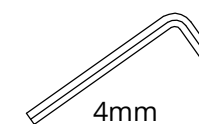

Ⓕ x 1



 ASSEMBLY INSTRUCTION BAYARD MD104

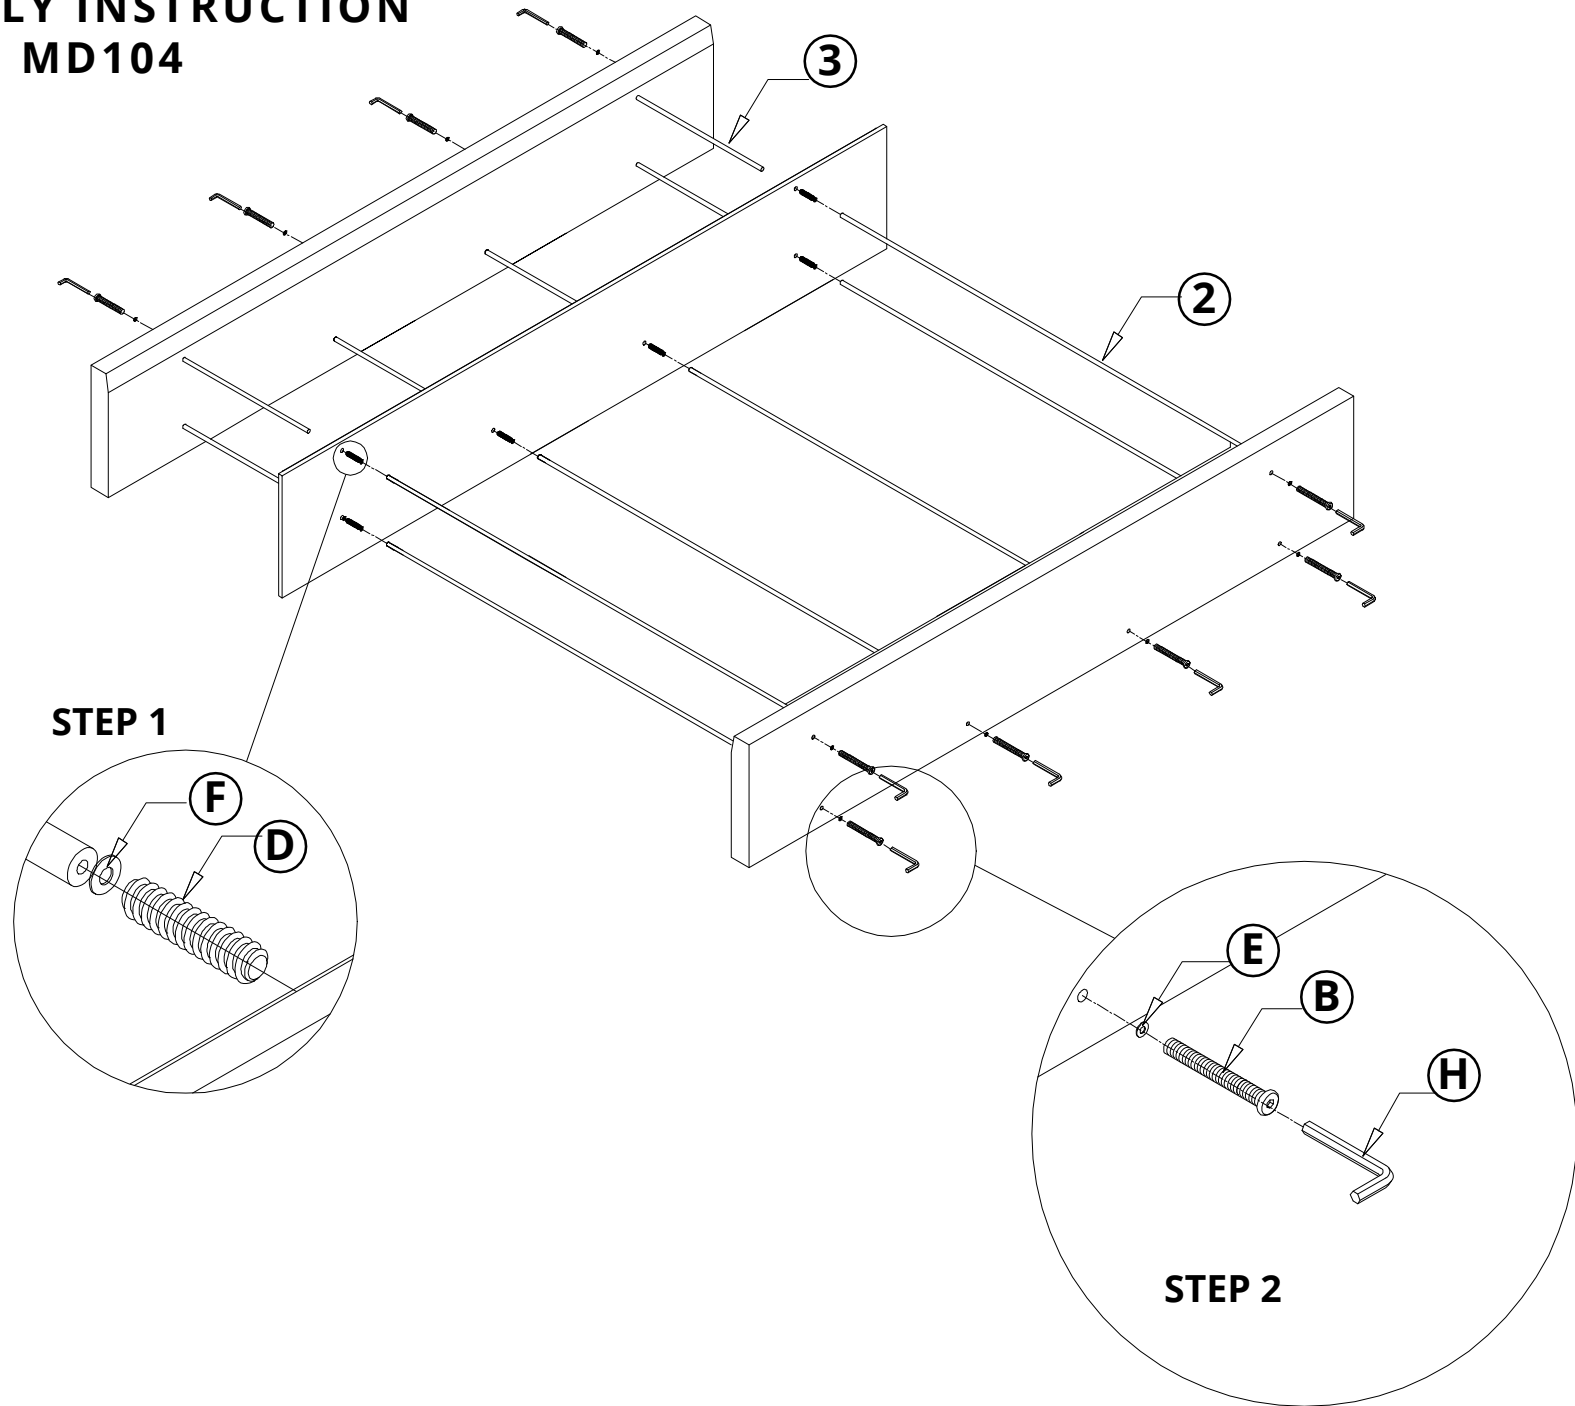



ASSEMBLY INSTRUCTION

BAYARD MD104

