

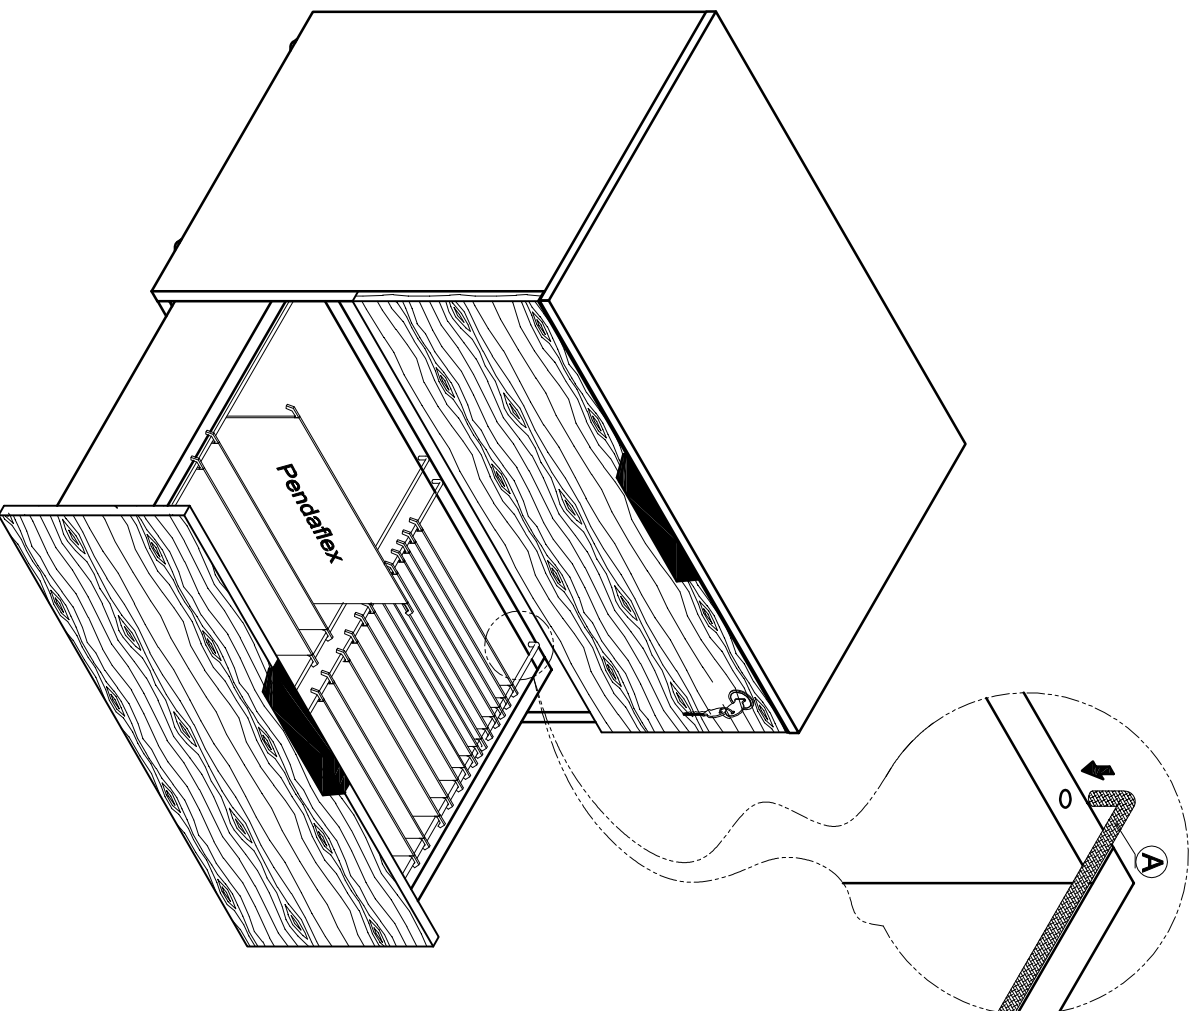
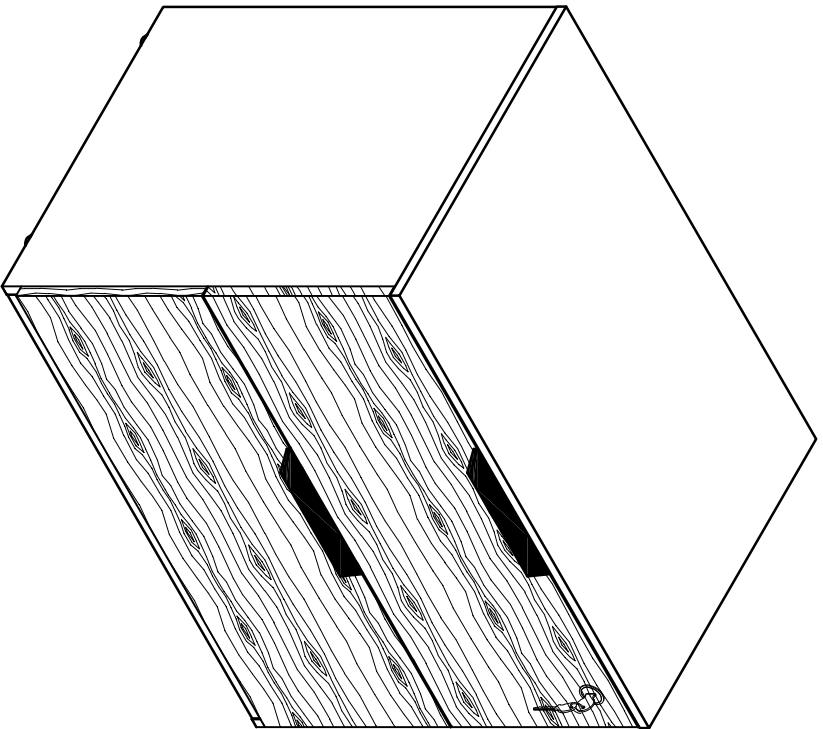


ASSEMBLY INSTRUCTION


BROOME LATERAL FILE CABINET

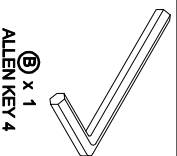


HARDWARE

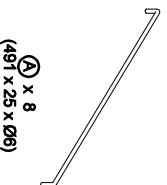

STEP 2

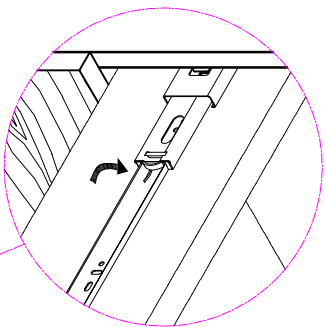

STEP 1

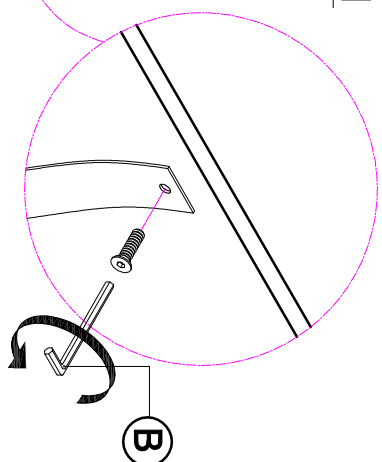

STEP 3

