


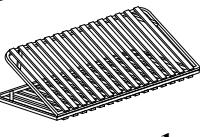




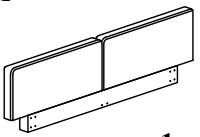







ASSEMBLY INSTRUCTIONS


WORTH BED

PARTS LIST


A	B	C L + R	D	E	F L + R
					
1 pc	1 pc	2 pcs	1 pc	2 pcs	2 pcs

HARDWARES LIST


1	2	3	4	5	6	7	8
Wood Dowels Ø12x50	Bracket	Flat Washers	Allen Bolts M8x25	Allen Wrenh M5x65			
					4 pcs	4 pcs	1 pc
4 pcs	4 pcs	32 pcs	32 pcs	1 pc	4 pcs	4 pcs	1 pc

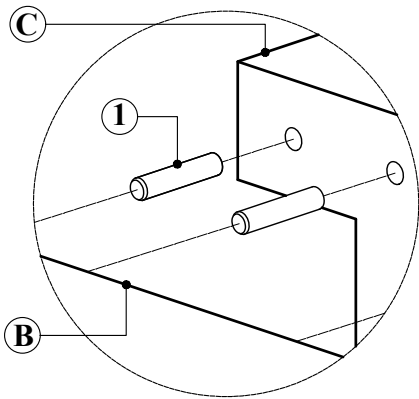


STEP 1


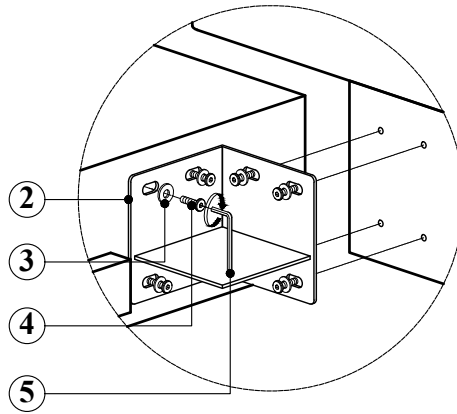


STEP 2

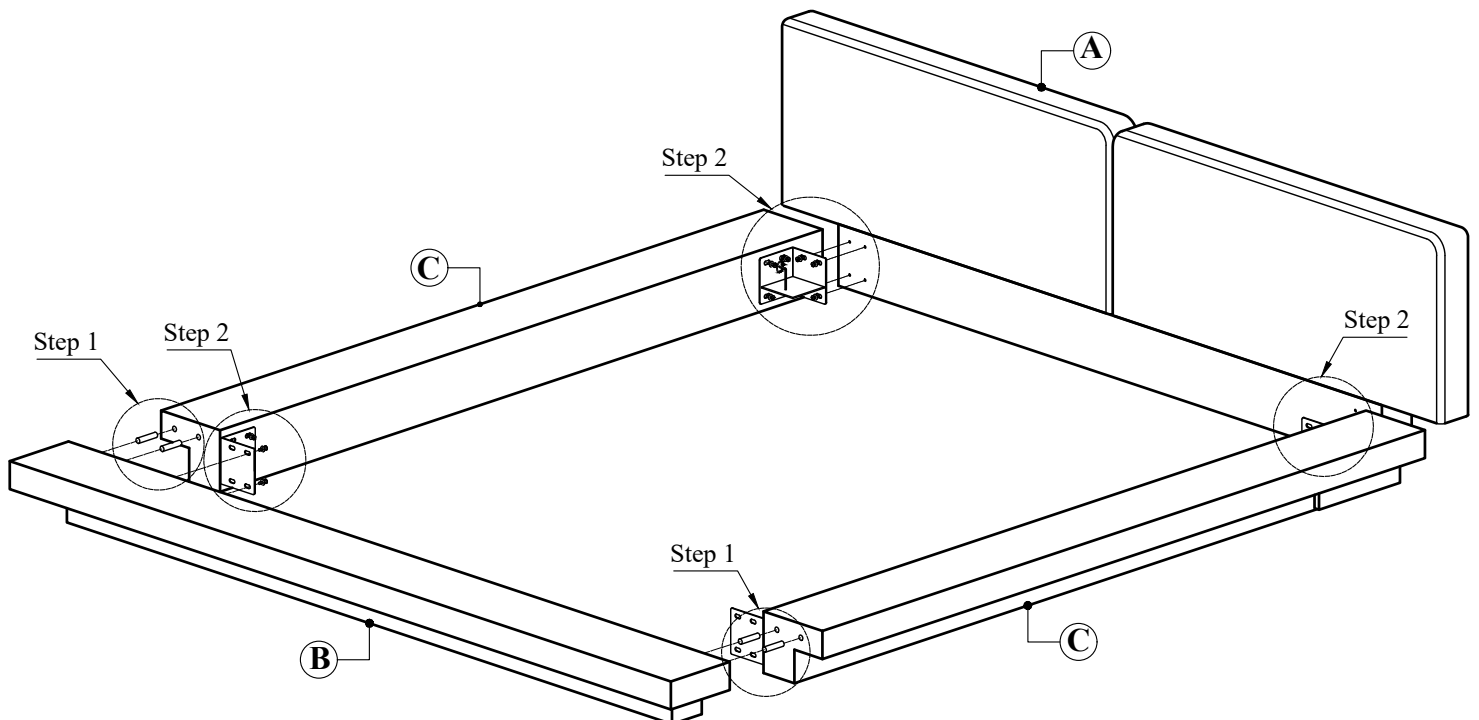


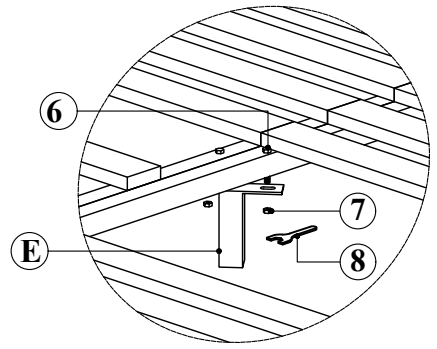

STEP 3

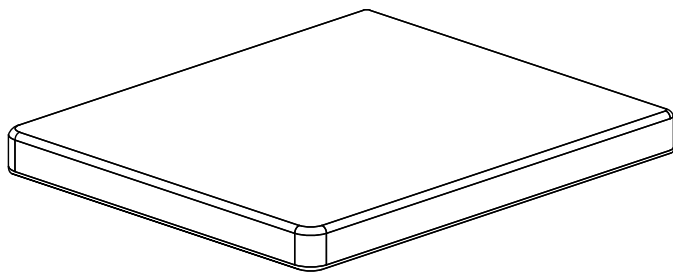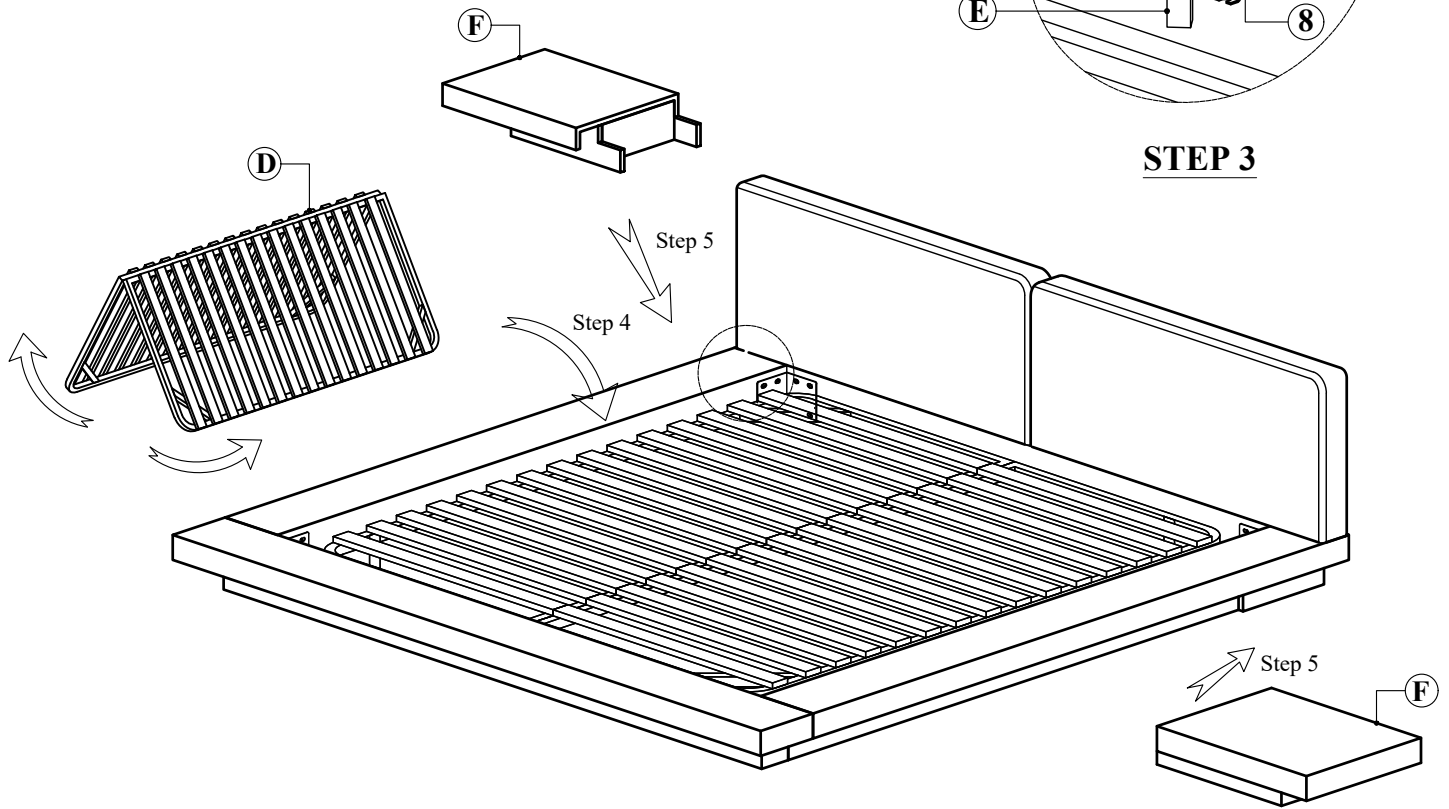

Step 6

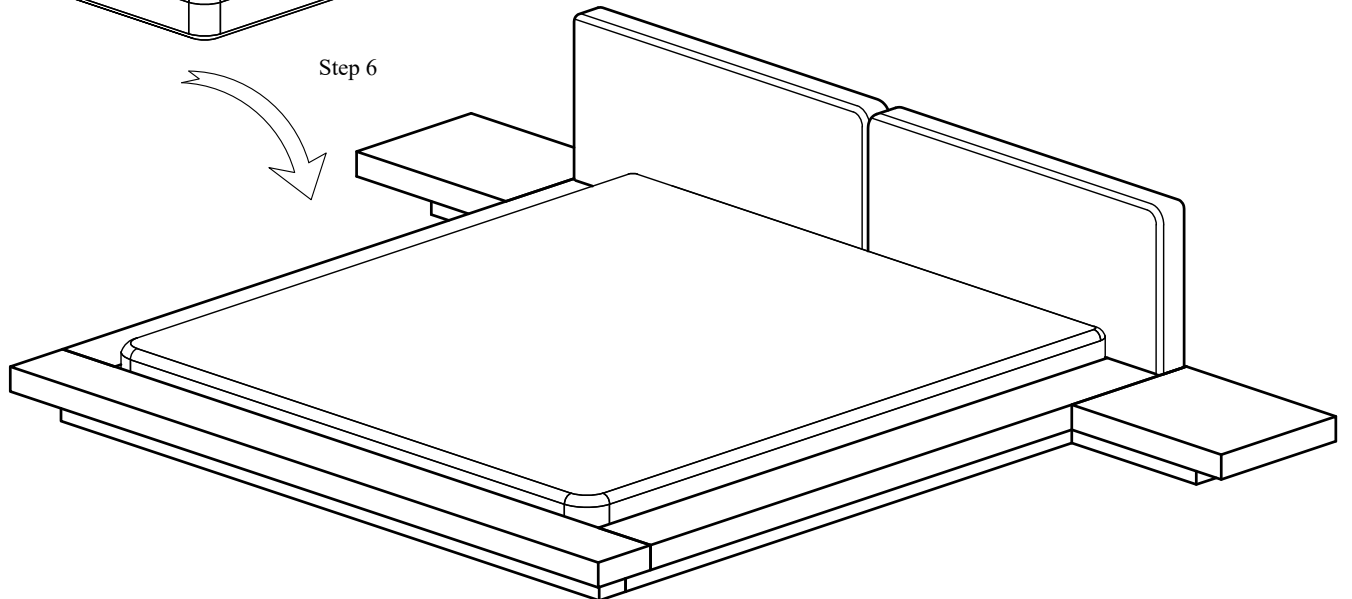

COMPLETE