




# PARTS

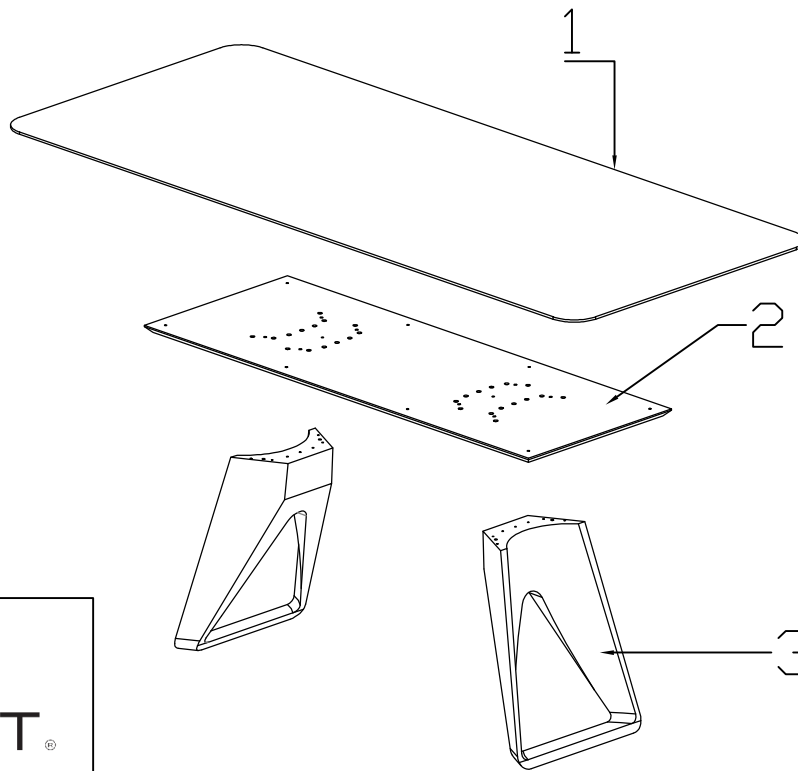


A



B




C





**MODLOFT**®

1810 NE 144 ST • NORTH MIAMI, FL • 33181  
MODLOFT.COM


# PRESTON DINING TABLE

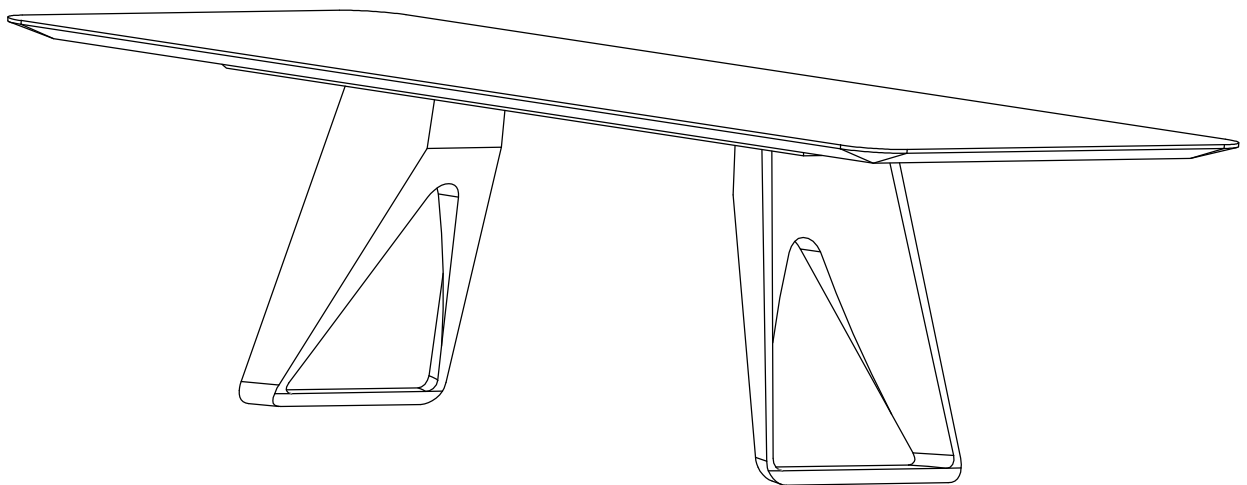

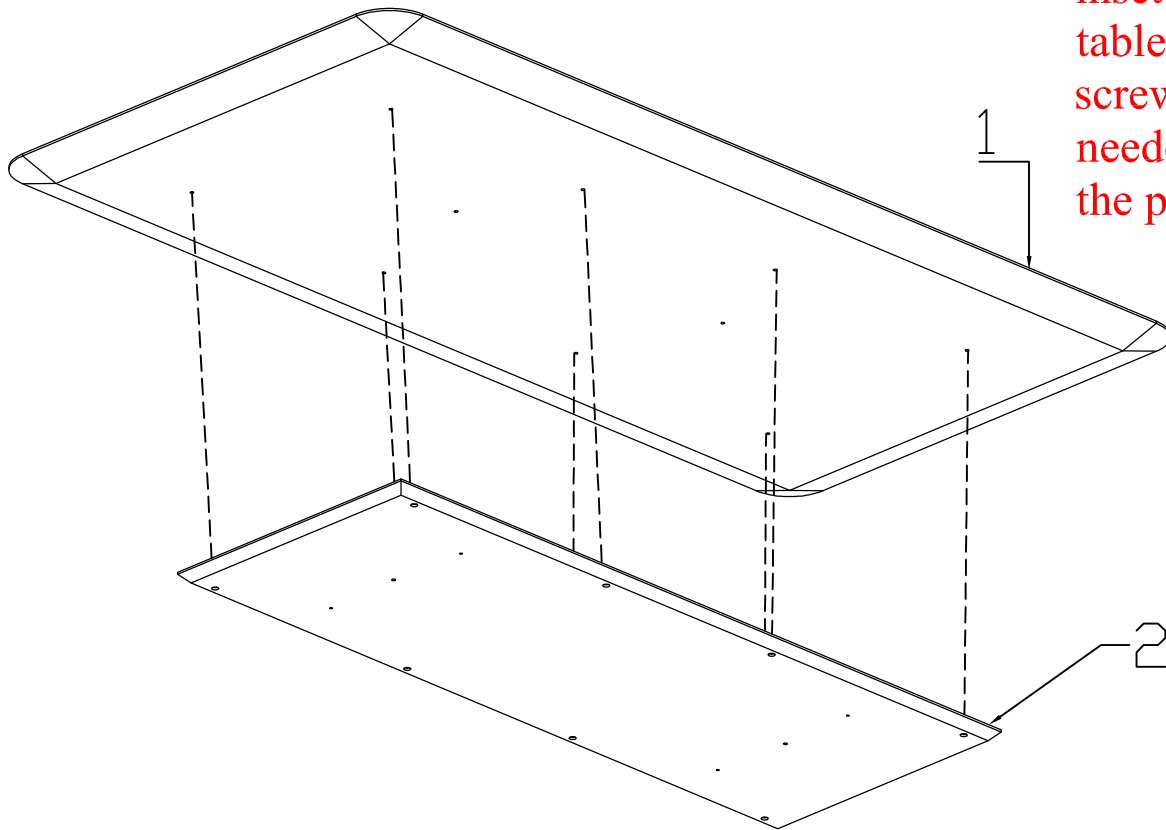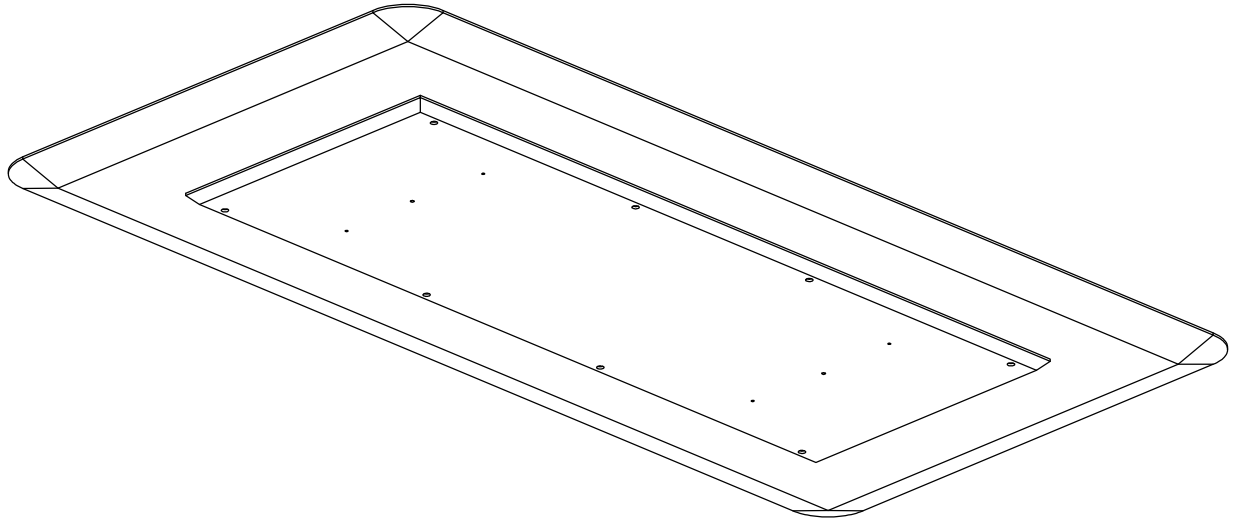


Unscrew the inset from the table top, the screws are needed further in the process.


A

  
08x30 mm


04

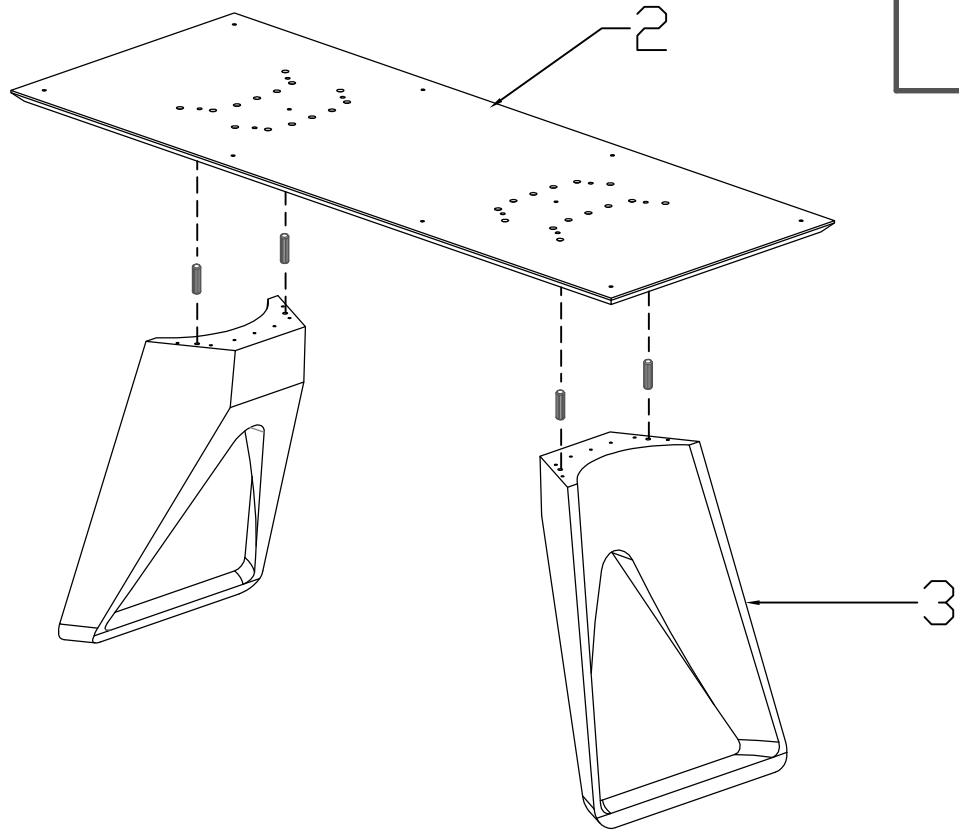


B


  
07x90 mm

14

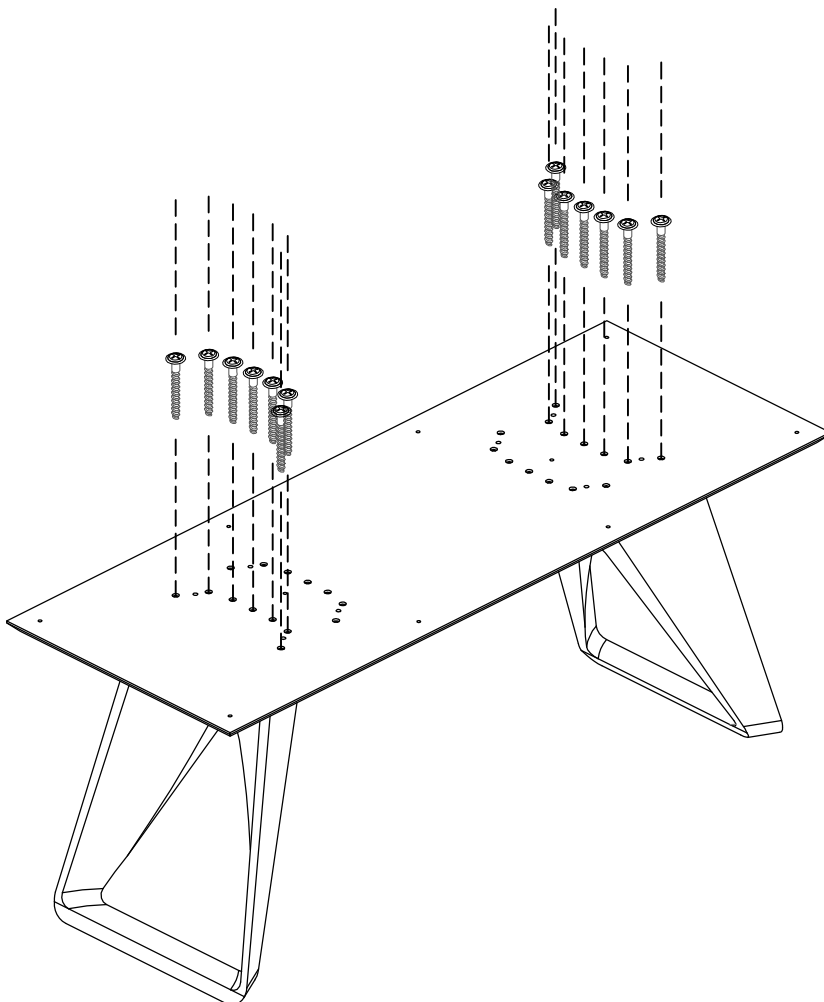

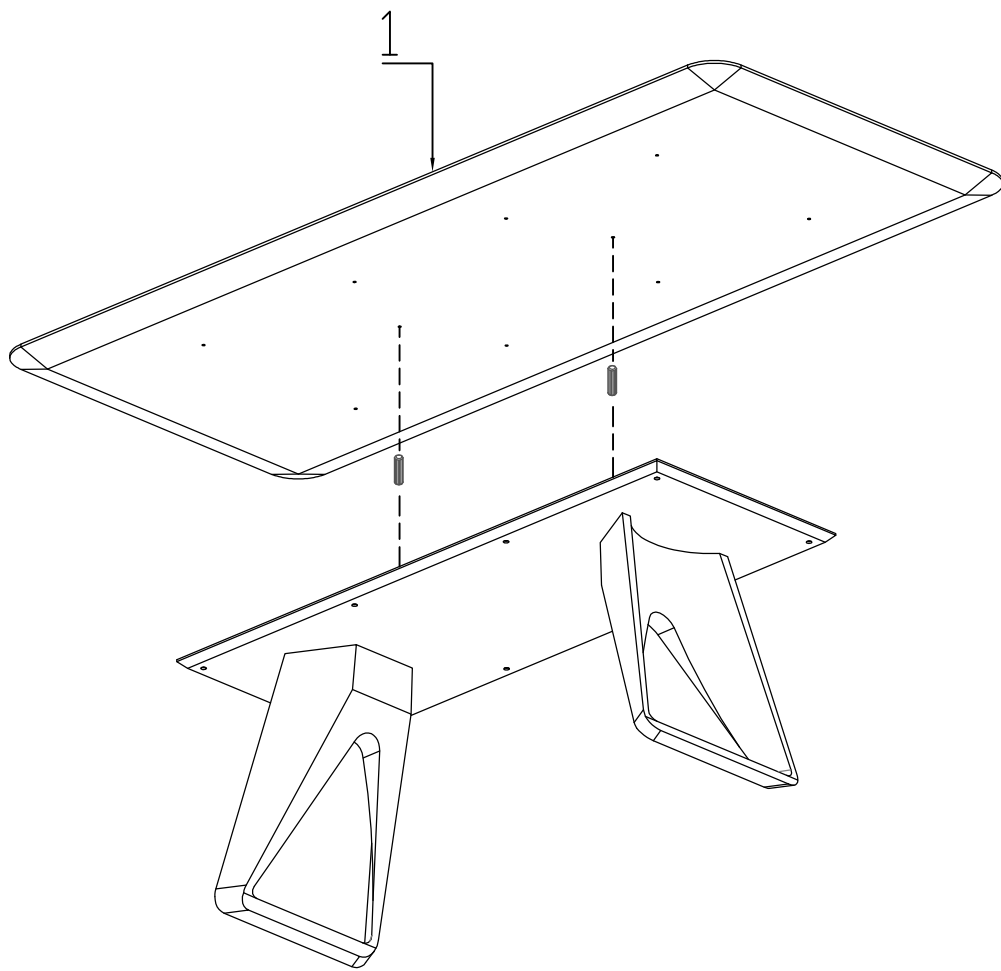


**A**




08x30 mm

02

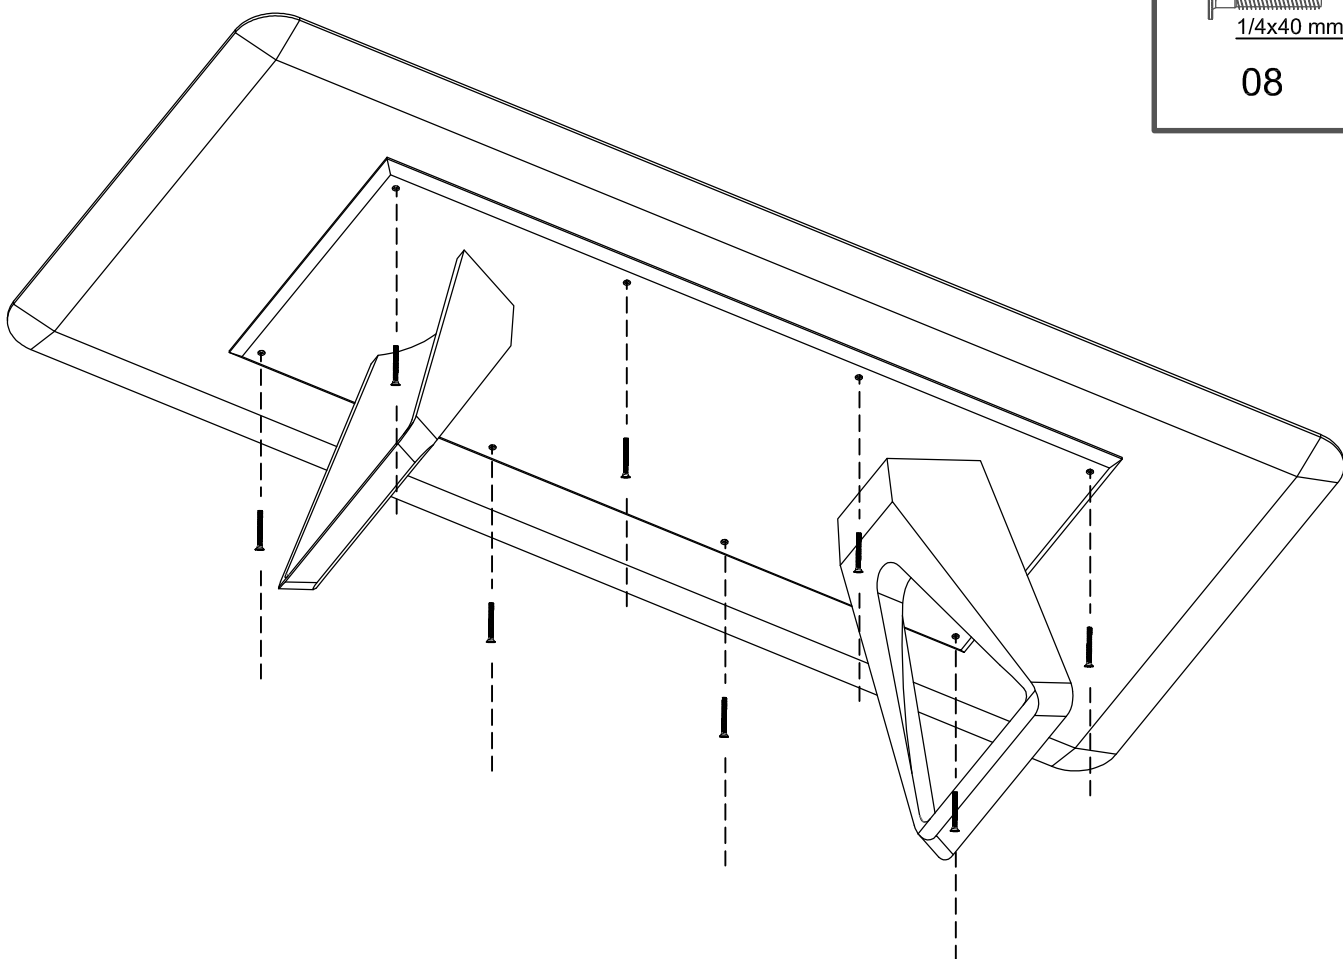

**C**



1/4x40 mm

08