

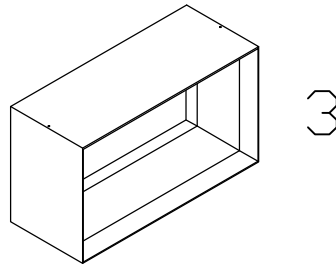
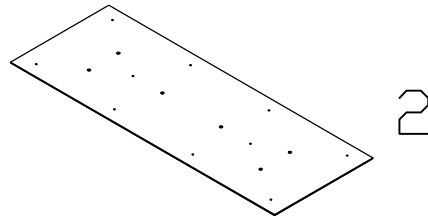



PARTS

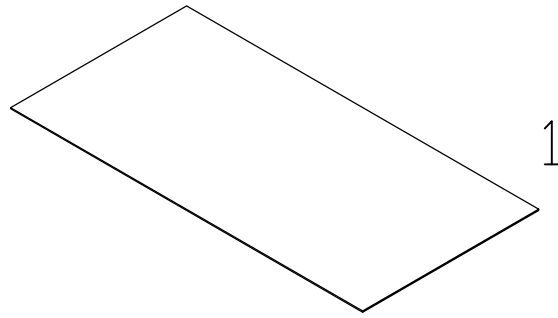


A



B




C




MODLOFT®


1810 NE 144 ST • NORTH MIAMI, FL • 33181
MODLOFT.COM

GREENWICH DINING TABLE

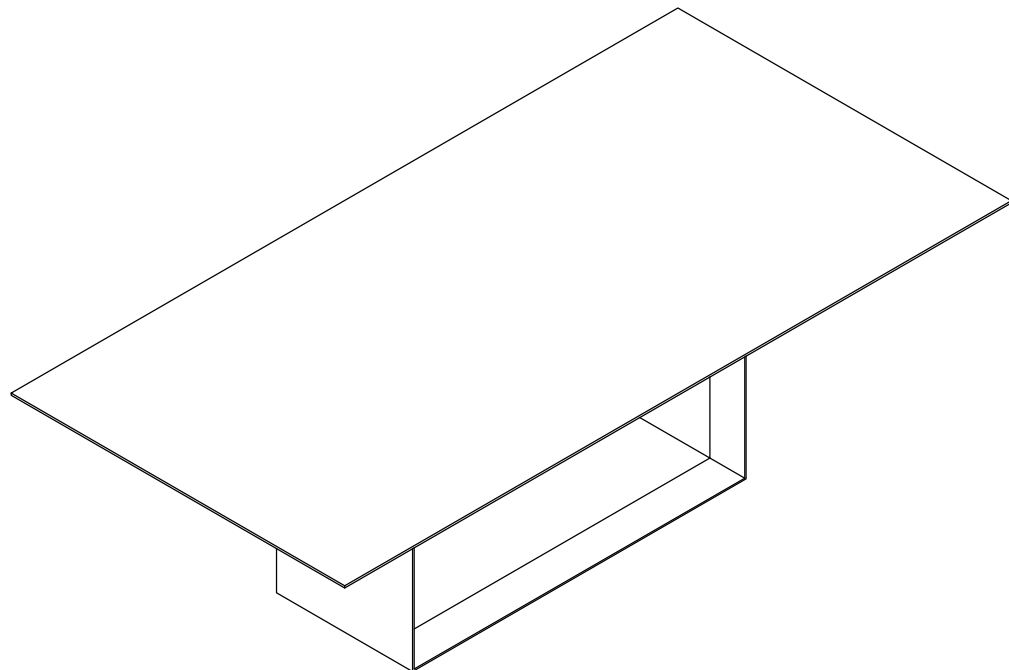

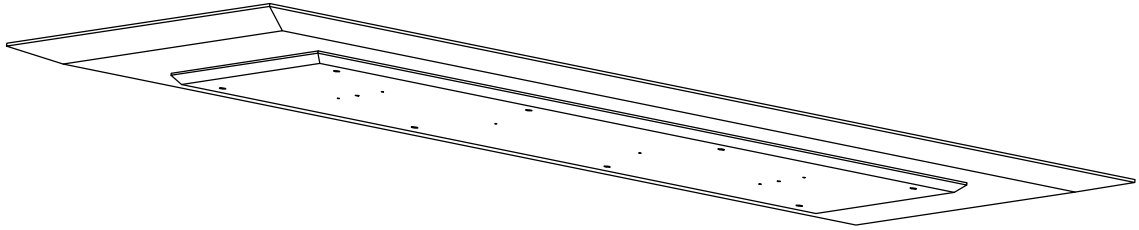


Unscrew the inset from the table top, the screws are needed further in the process.

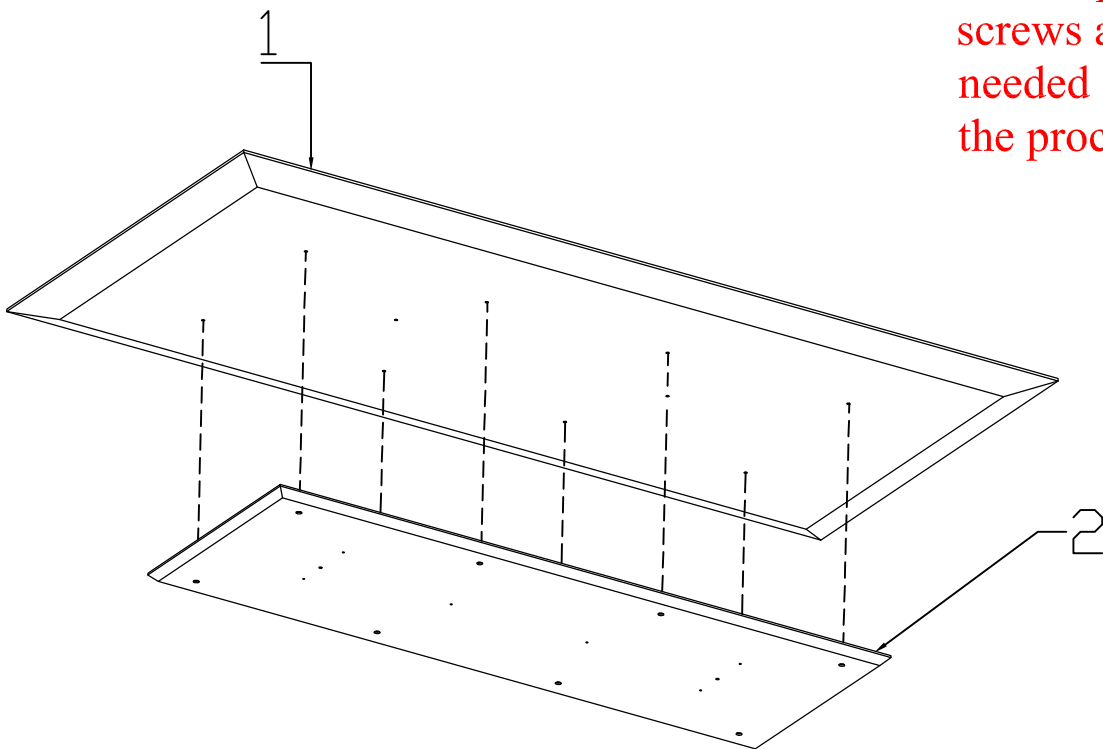


A




08x30 mm

02

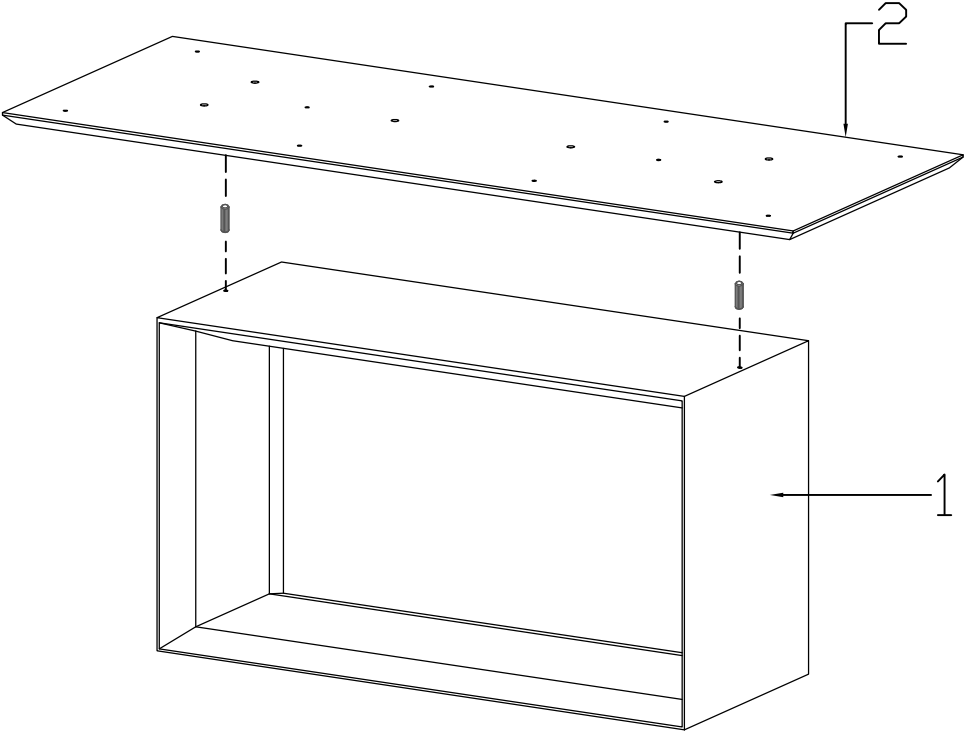


B




4,5x50 mm

06

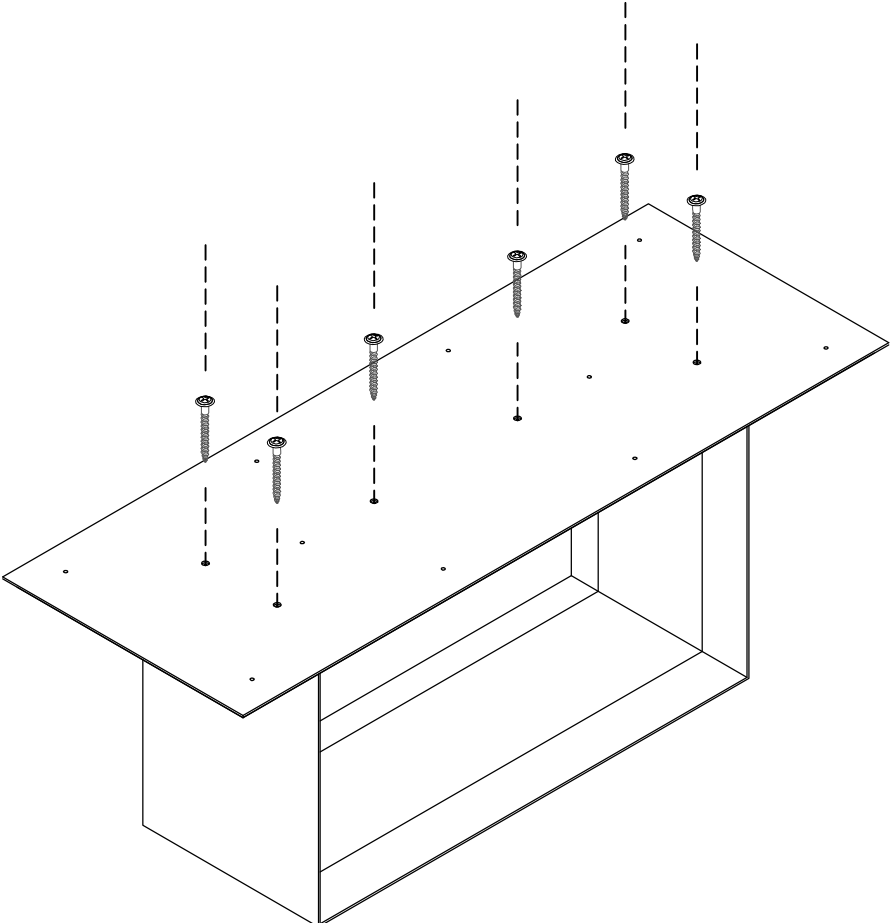


A




08x30 mm

02

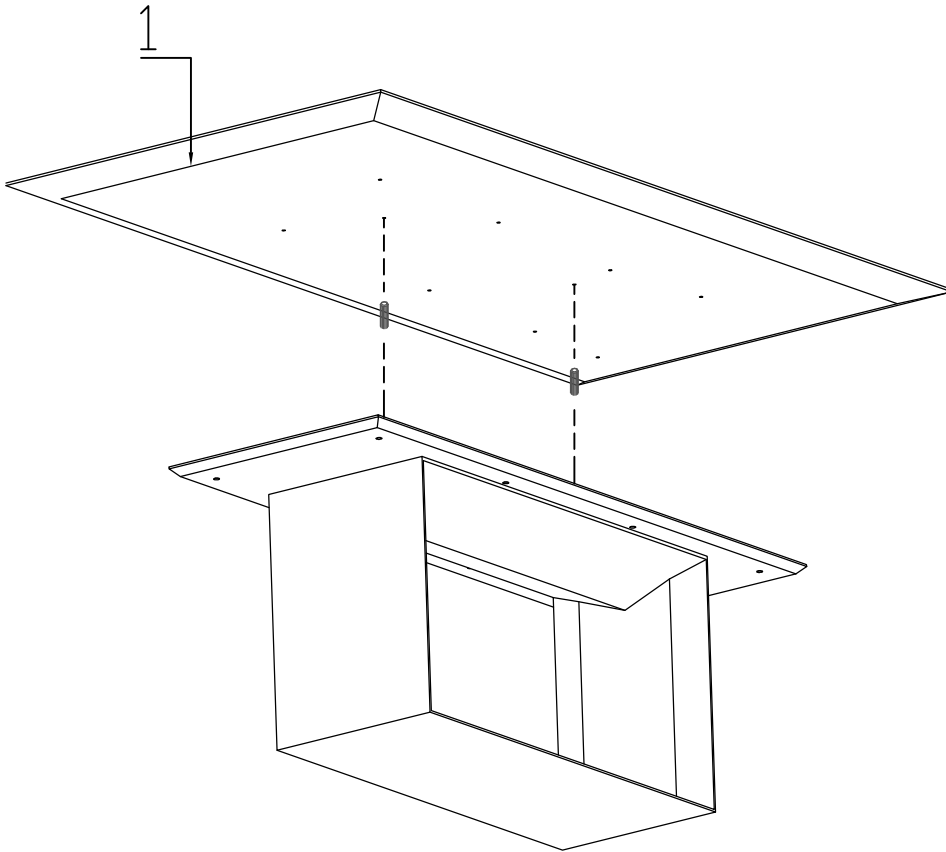

C



1/4x40 mm

08

