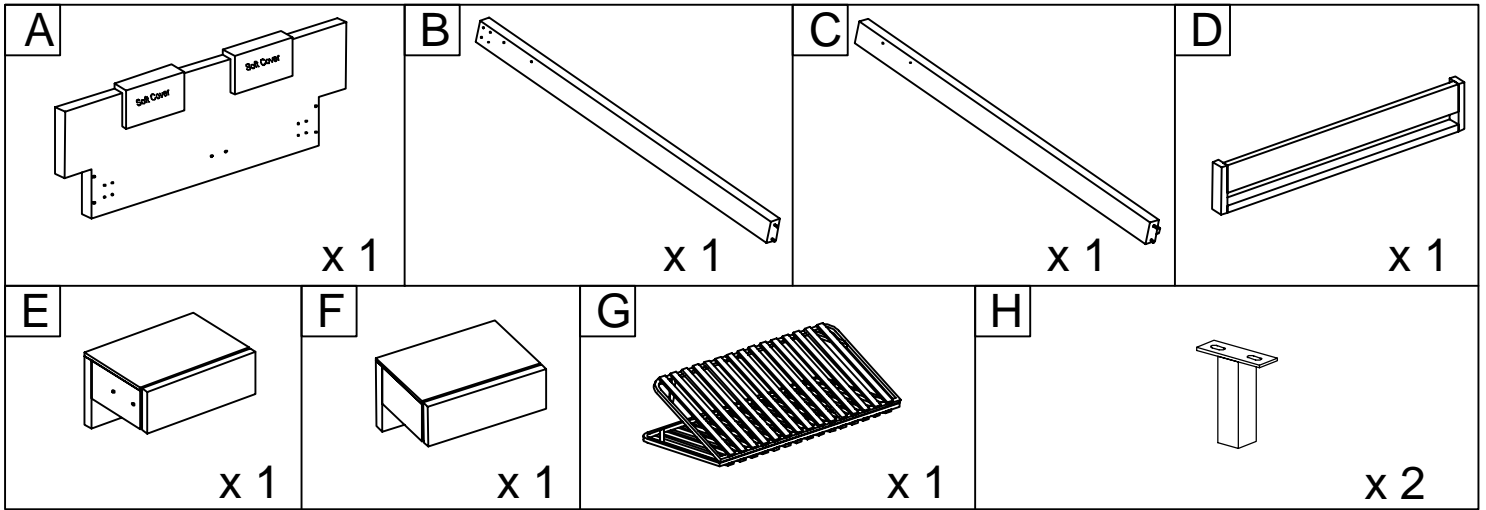



Assembly Instructions

MONROE BED


PARTS LIST



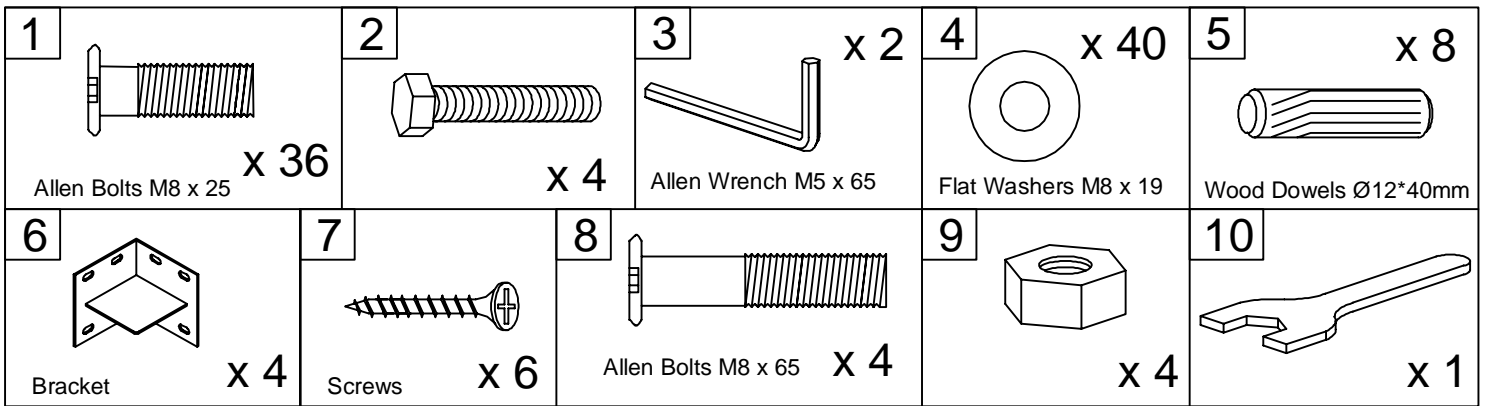
HARDWARES LIST



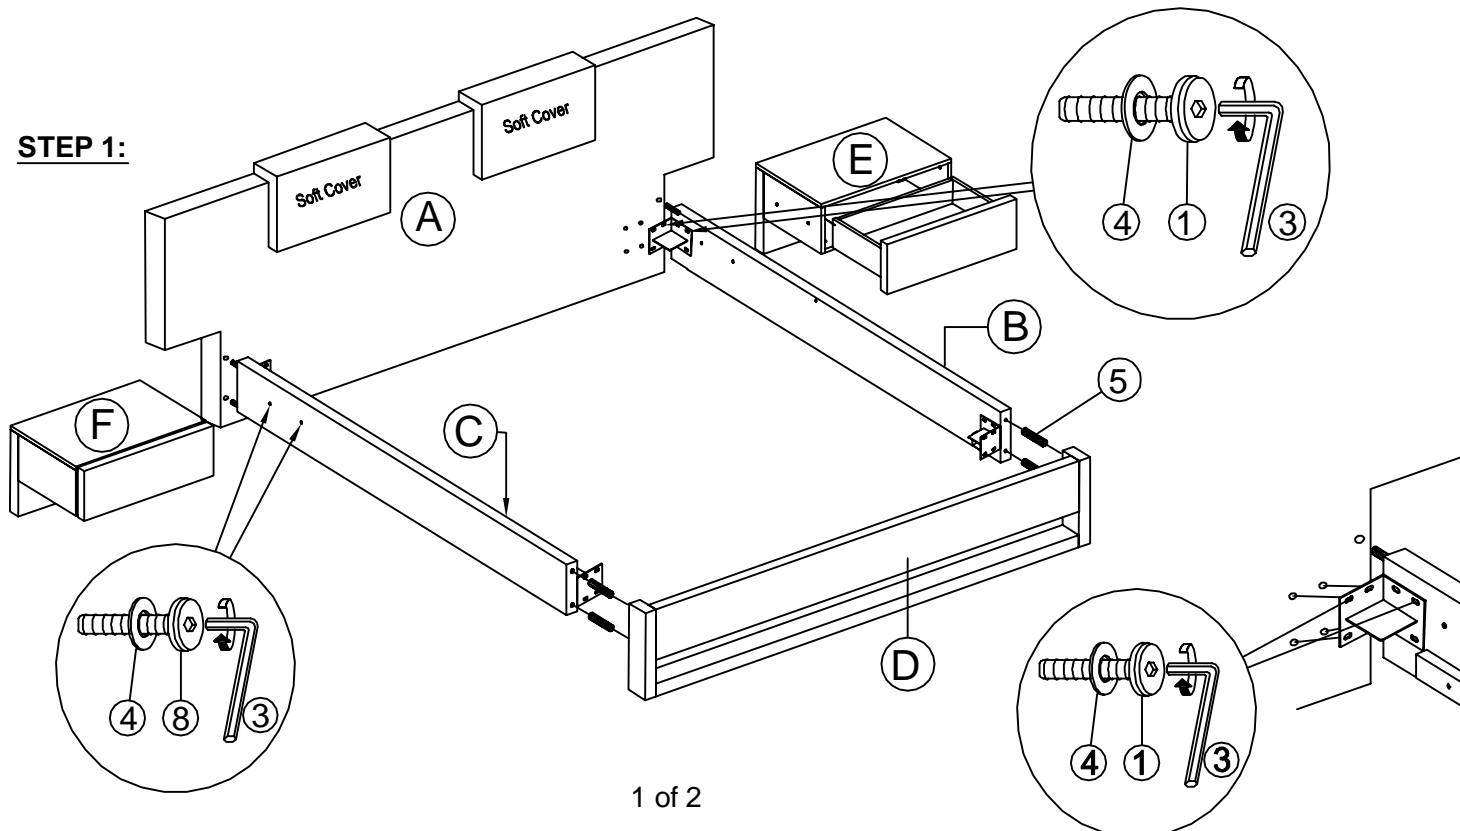
STEP 1:



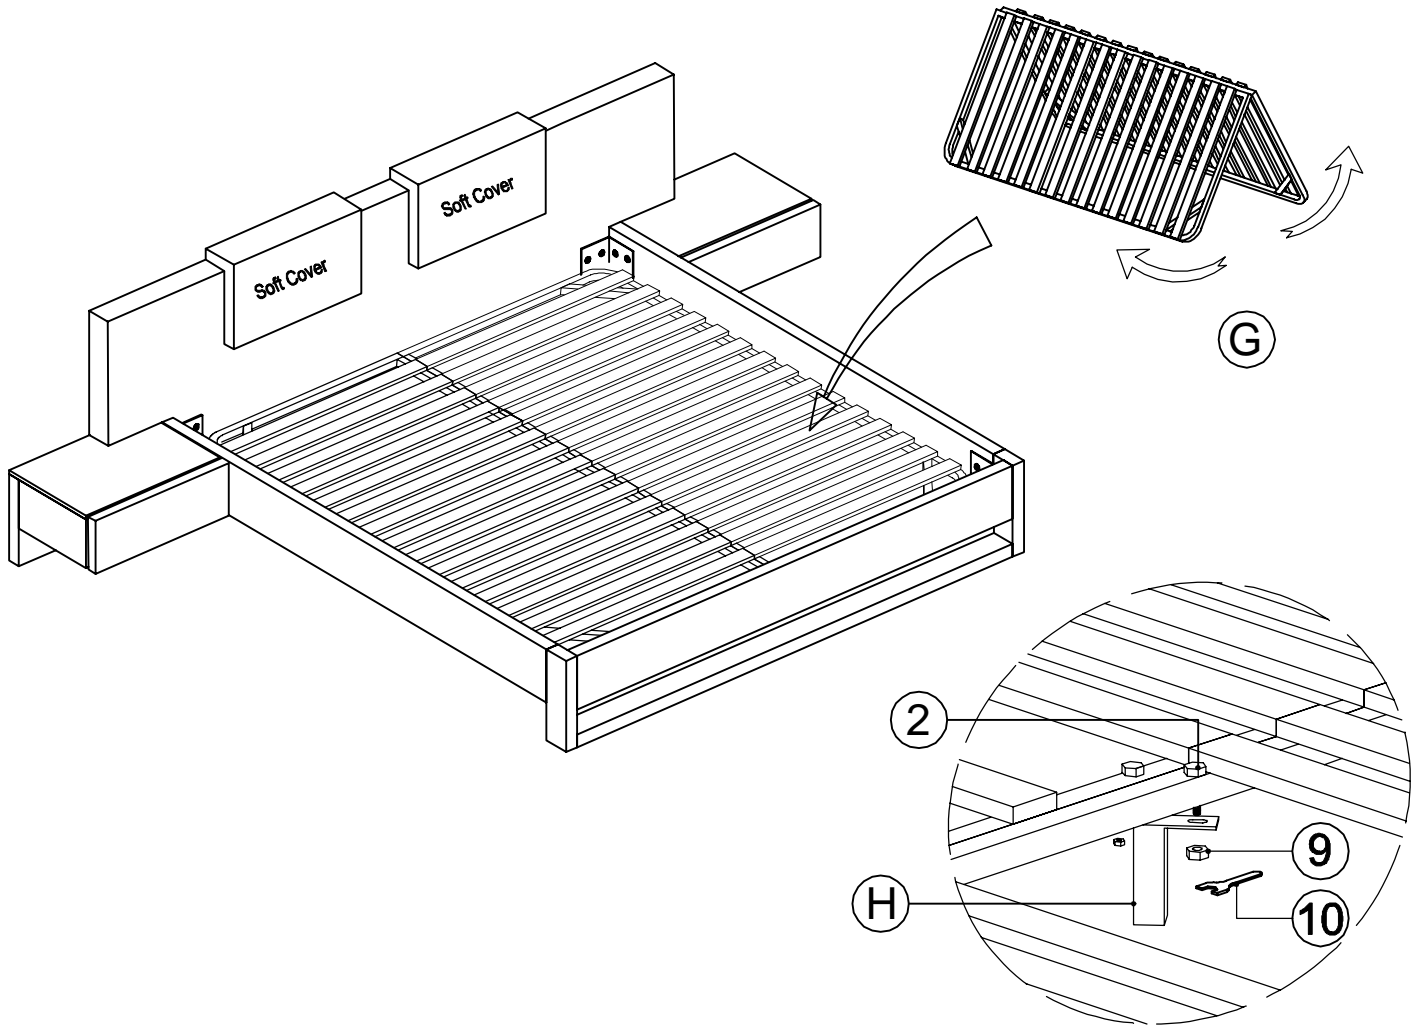STEP 2:



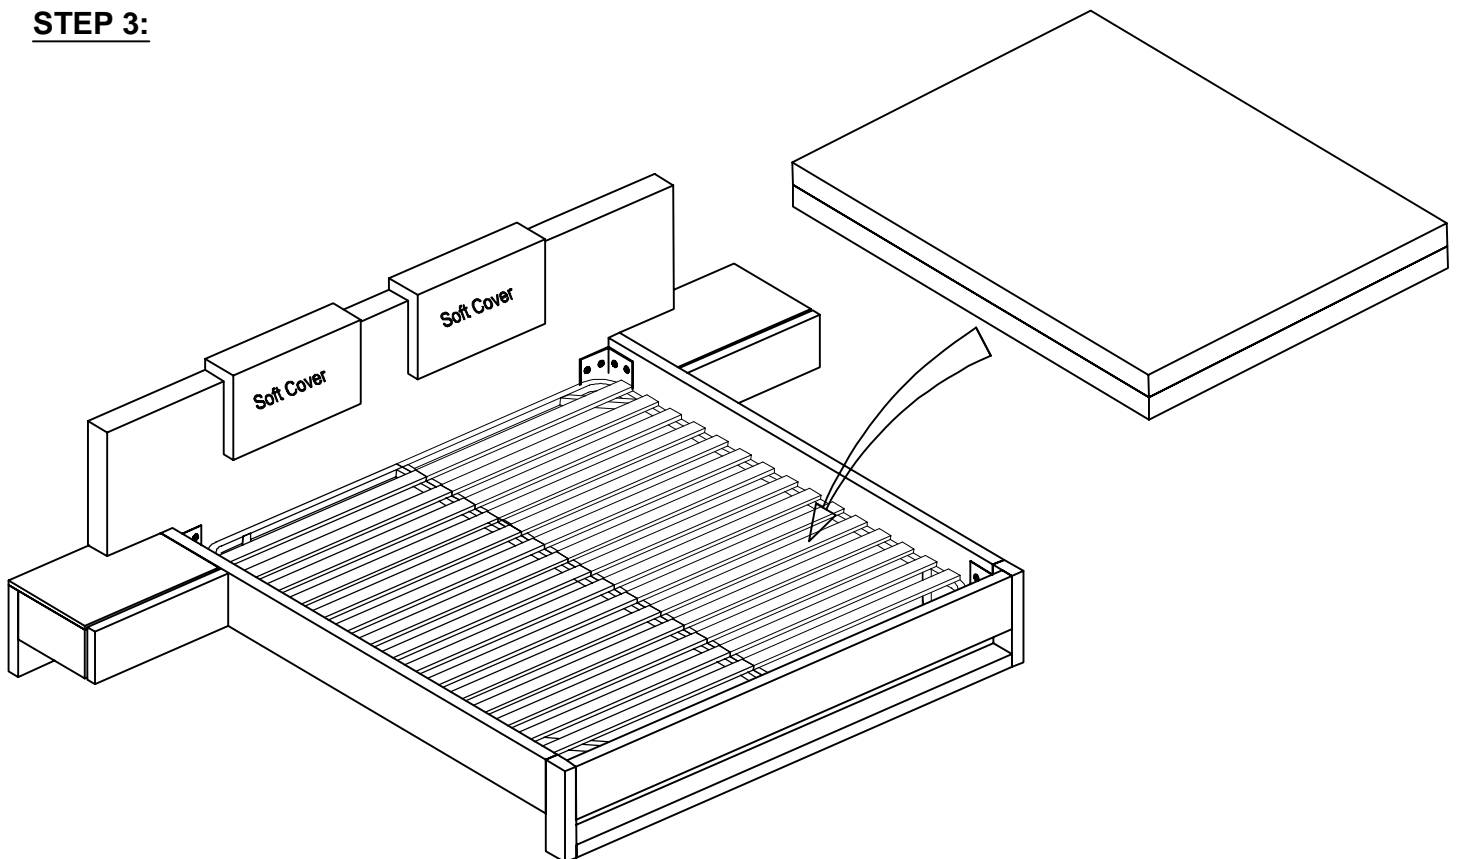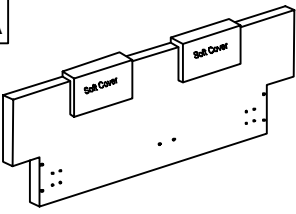
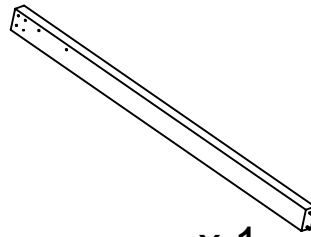
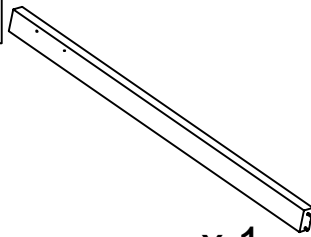
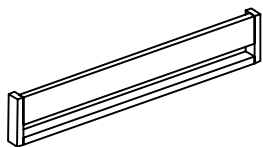
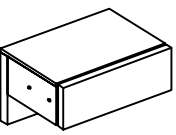
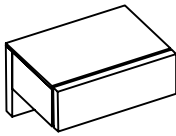
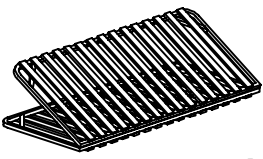

STEP 3:













Assembly Instructions

MONROE BED


PARTS LIST

A  x 1	B  x 1	C  x 1	D  x 1
E  x 1	F  x 1	G  x 1	H  x 2


HARDWARES LIST

1  Allen Bolts M8 x 25 x 36	2  x 4	3  Allen Wrench M5 x 65 x 2	4  Flat Washers M8 x 19 x 40	5  Wood Dowels Ø12*40mm x 8
6  Bracket x 4	7  Screws x 6	8  Allen Bolts M8 x 65 x 4	9  x 4	10  x 1

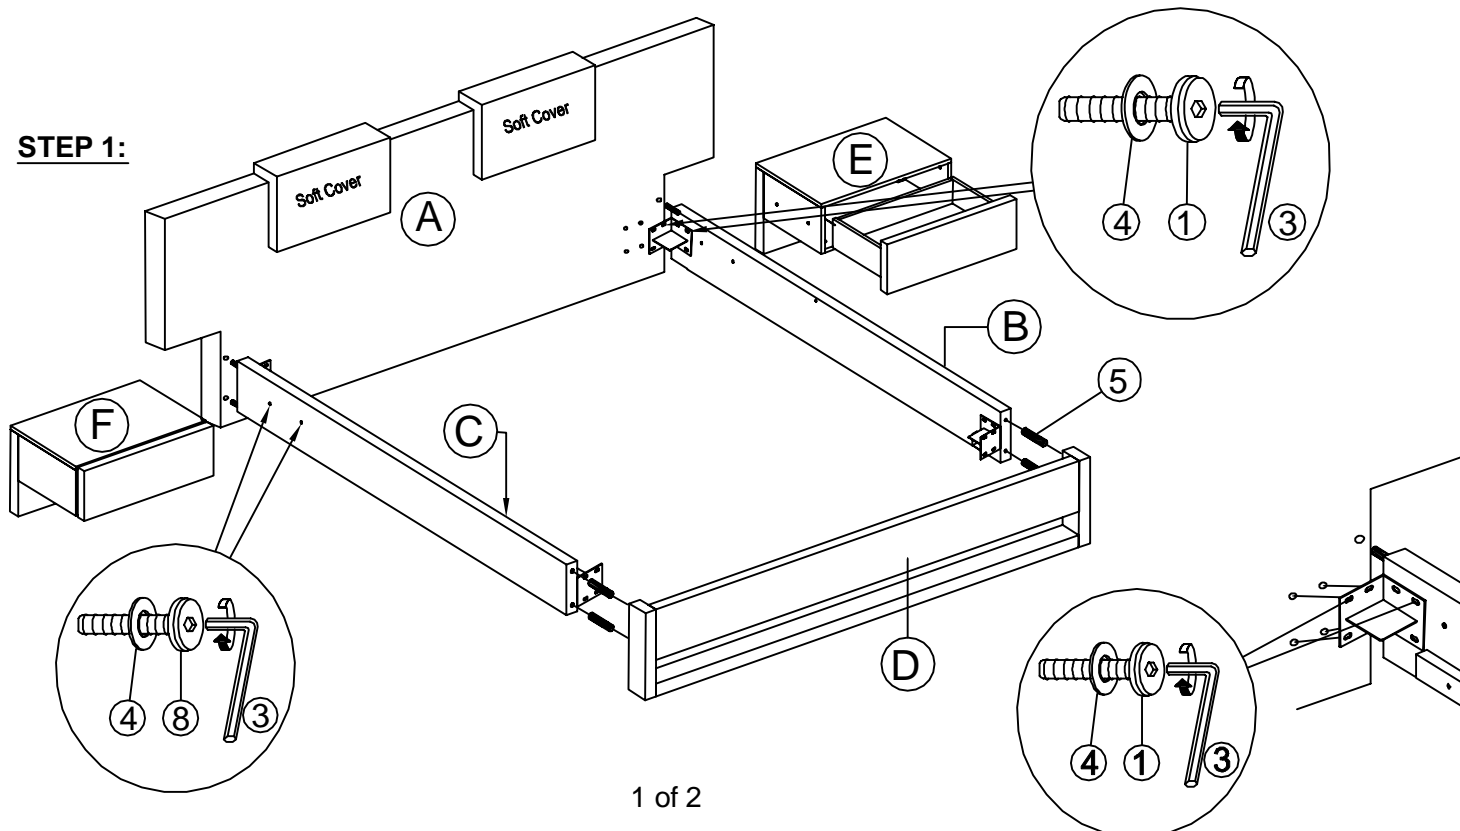
STEP 1:



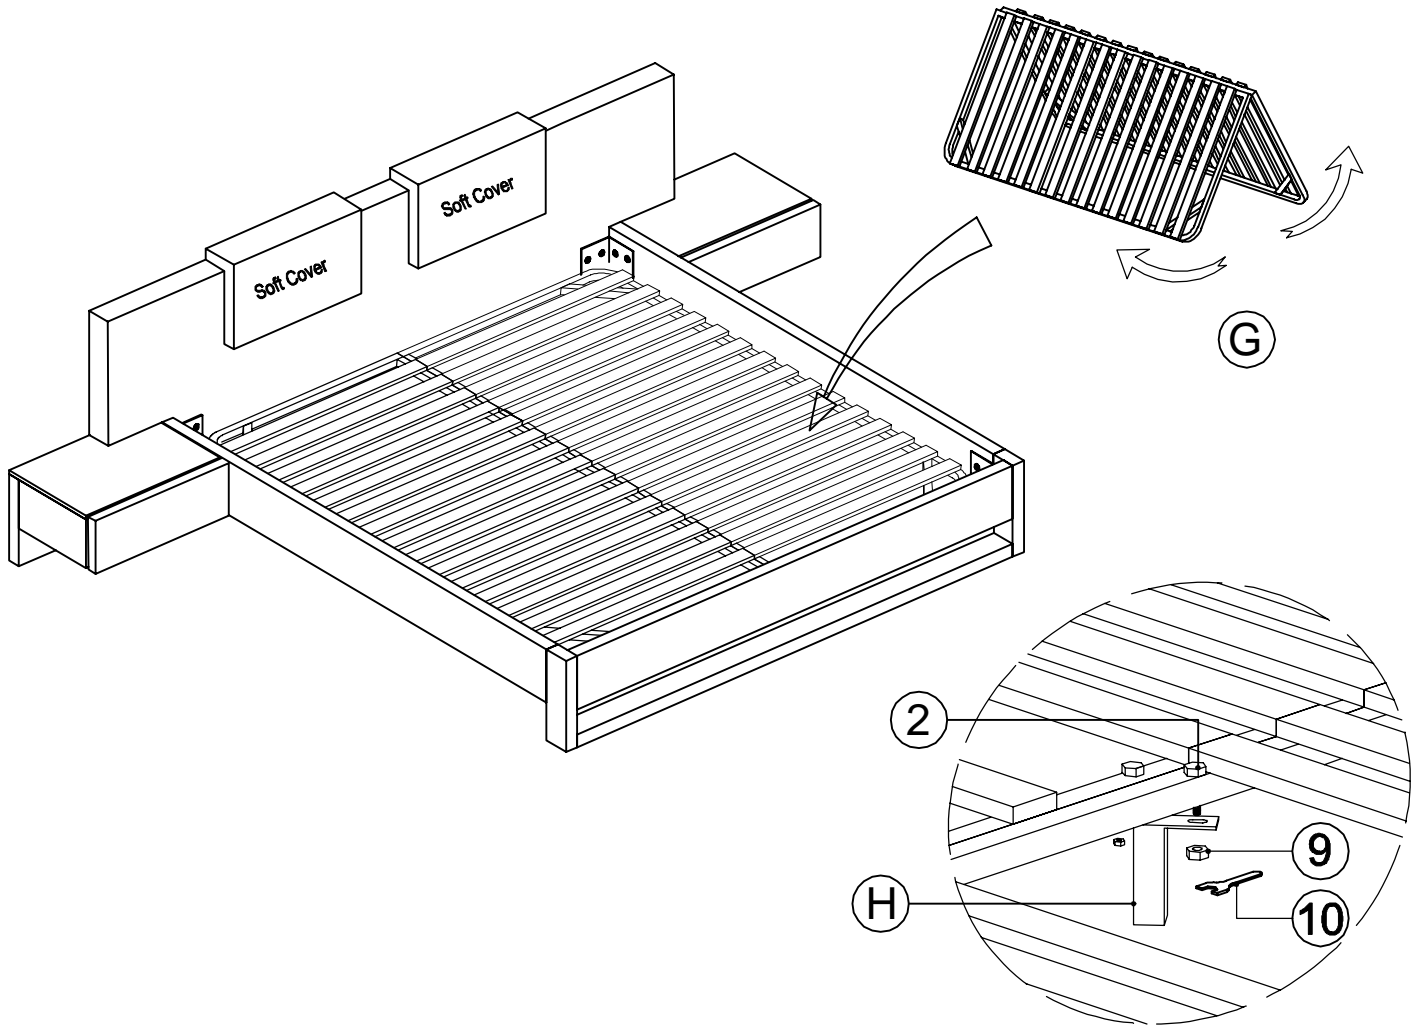STEP 2:



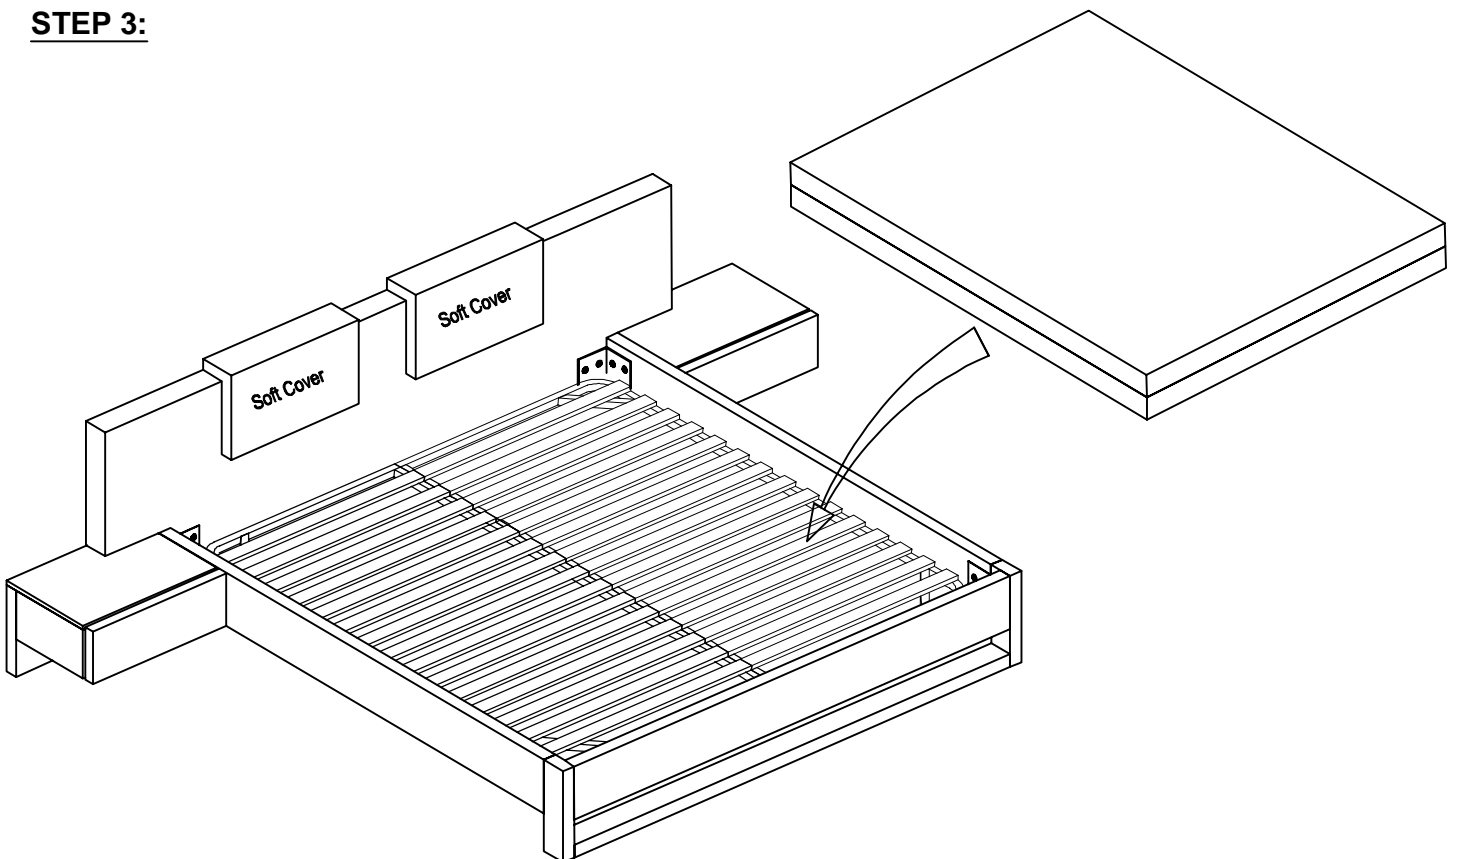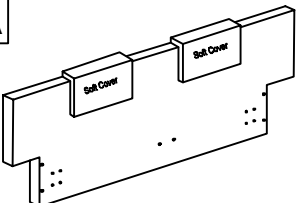
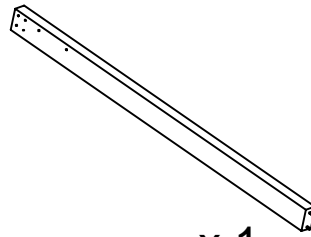
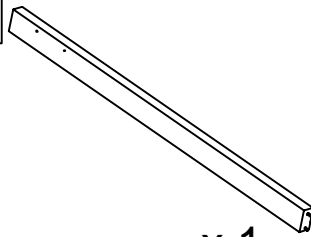
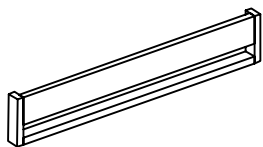
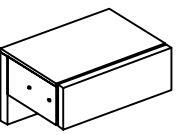
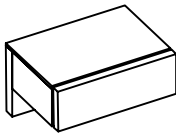
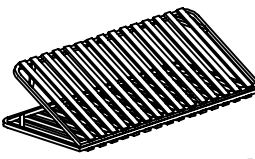

STEP 3:













Assembly Instructions

MONROE BED


PARTS LIST

 <p>A</p> <p>x 1</p>	 <p>B</p> <p>x 1</p>	 <p>C</p> <p>x 1</p>	 <p>D</p> <p>x 1</p>
 <p>E</p> <p>x 1</p>	 <p>F</p> <p>x 1</p>	 <p>G</p> <p>x 1</p>	 <p>H</p> <p>x 2</p>


HARDWARES LIST

 <p>1</p> <p>Allen Bolts M8 x 25</p> <p>x 36</p>	 <p>2</p> <p>x 4</p>	 <p>3</p> <p>Allen Wrench M5 x 65</p> <p>x 2</p>	 <p>4</p> <p>Flat Washers M8 x 19</p> <p>x 40</p>	 <p>5</p> <p>Wood Dowels Ø12*40mm</p> <p>x 8</p>
 <p>6</p> <p>Bracket</p> <p>x 4</p>	 <p>7</p> <p>Screws</p> <p>x 6</p>	 <p>8</p> <p>Allen Bolts M8 x 65</p> <p>x 4</p>	 <p>9</p> <p>x 4</p>	 <p>10</p> <p>x 1</p>

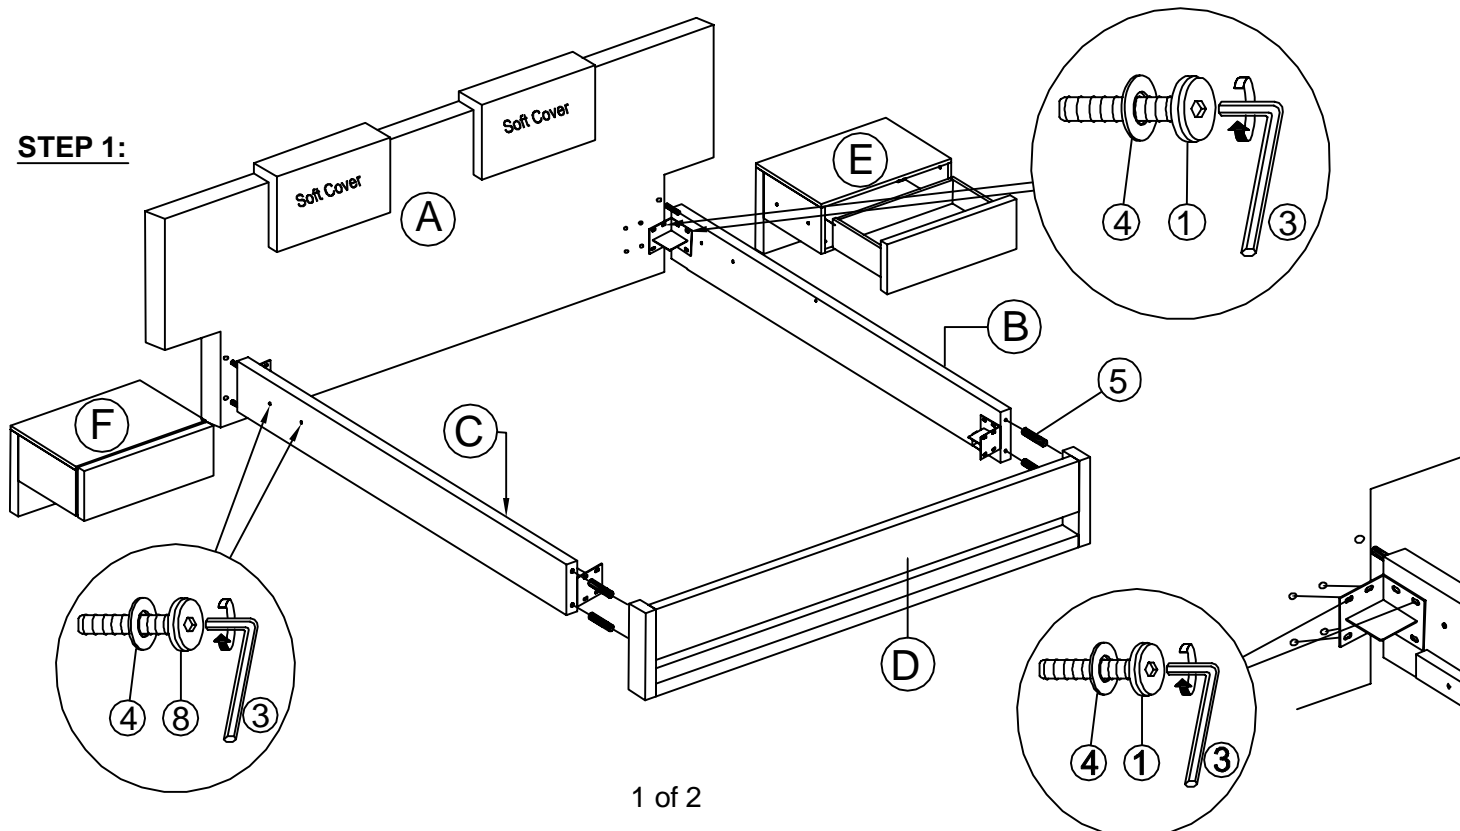STEP 1:



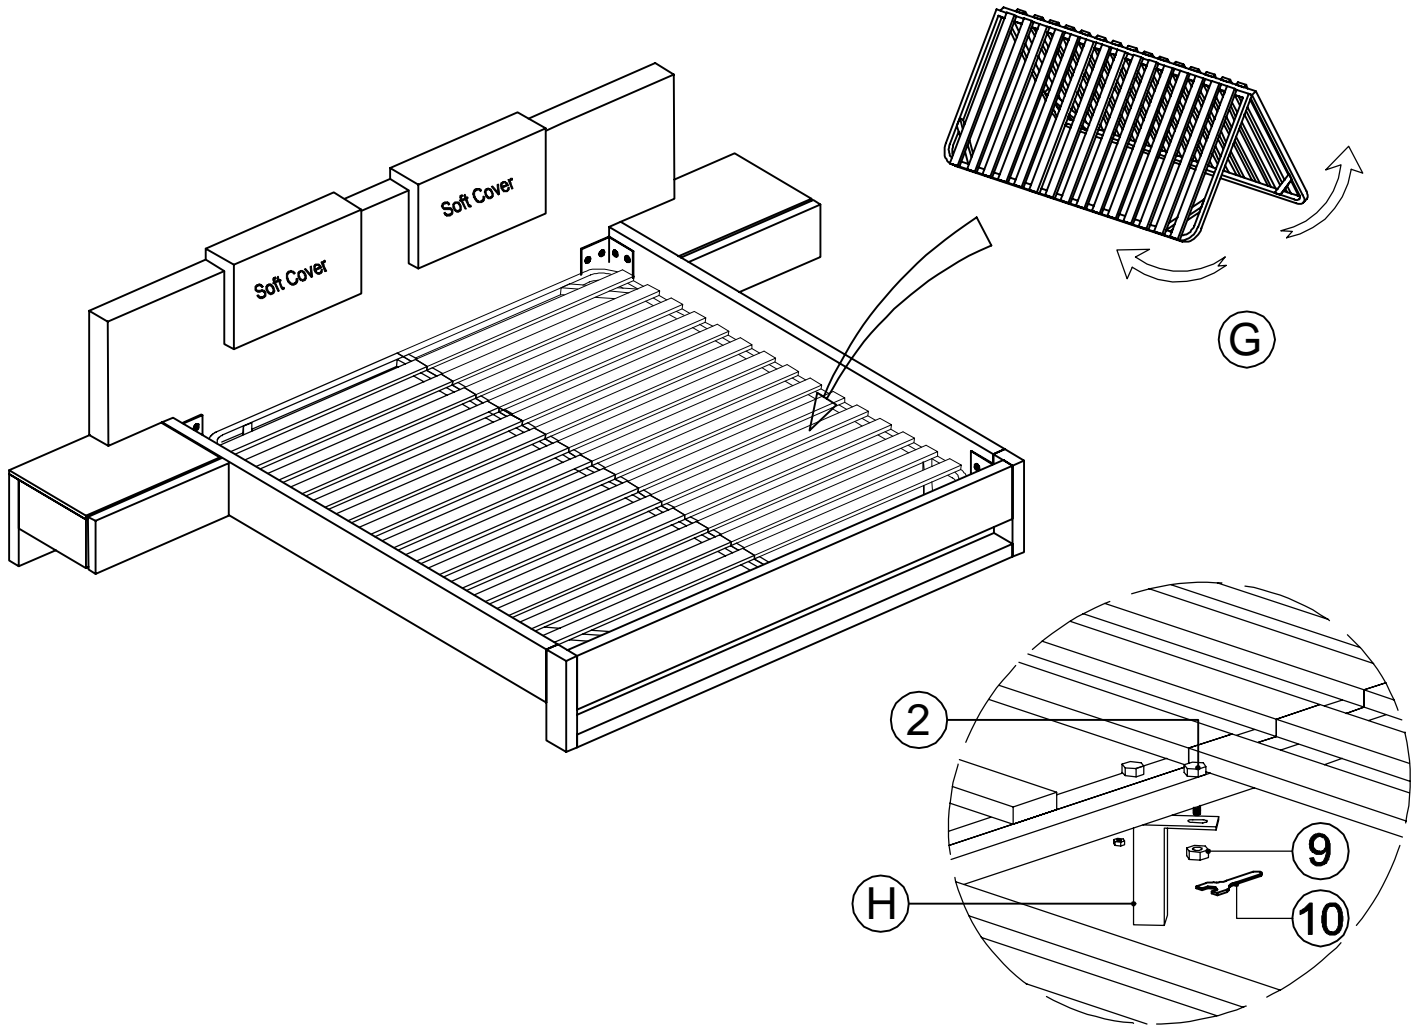STEP 2:



STEP 3:

